



DVR SYSTEM User's Manual

Manual Revision : Version 5.3 above
Release Date : July 1, 2004

Chapter I . Main Screen

- I -1. Explanation of Main Screen
 - A ~ N Functions per button
- I -2. Pan/Tilt Control
 - O Pan/Tilt control
 - (1) Preset
 - (2) Group
 - (3) Menu

Chapter II . Server Set Up

- II -1. Standard Set Up
 - a Camera name display
 - b See the voice wave
 - c Voice function
 - d Camera auto switching
 - e Auto system reset function
 - f Password Setup
 - g Time Setup
 - h Printer Setup
 - i Managing disk
 - j Compression
 - k Set Cannel
 - l Windows Logon
 - m Power Mode
 - n On Screen Keyboard
- II -2. Recording Type
 - a Camera Number
 - b Display (Hidden Camera Function)
 - c Position (Camera Position name,OSD)
 - d Event (Set Event)
 - e Frame (Adjust Frame Rate)

- f Pre (Pre-Alarm)
- g Post (Post-Alarm)
- h Sensor Type (Choose Sensor Type)
- i Time
- j Alarm Control
- k Auto Camera Search
- l Set Alarm Event
- m Event Setup
- n Record Motion/Sensor Event

II -3. Schedule Setup

- a Channel
- b Schedule area
- c Buttons

II -4. Motion Setup

- a Channel
- b Motion area
- c Sensitivity
- d Show Motion Area
- e Beep for Motion
- f To the maximum quality Motion/Sensor
- g Delete

II -5. Color Setup

- a Channel
- b Color area
- c Color control scroll bar
- d Setup User's Default
- e Cancel User's Default

f All Default color

g Default Color

II -6.Pan/Tilt Setup

a Channel

b User Edit

c Master Controller

d Type

e Setup Communication

II -7.Control User Access

a Connection

b Check IP

c Port

d Transmission Speed and Image quality

e Insert ID and password

f Connected Client List

g Web Server

h Voice communication

i Live update

j Emergency Call

k IP server

Chapter III. Back Up

III-1.Backup format

a Channel No.

b Backup Disk

c Time list of recording data

d Backup

e Make AVI

f Burning CD

g Nero Burning Rom

INDEX

- h Explorer
- i Property
- j Send E-Mail

III -2.Backup format

- a Channel
- b Schedule
- c Apply all channel
- d Save time
- e Backup time

III -3.Backup format

- a Select Camera
- b Backed up data list(time table)
- c Play to confirm back up image
- d Slide bar to play
- e Play/Stop button

Chapter IV. Server Search

IV-1.Search Screen

- a Search screen
- b Exit (Go to 'display' mode.)
- c Event
- d Zoom in/out
- e Backup/Print/Live
- f Search the recorded data with below buttons
- g Time
- h Calendar
- i Function (Smart search,Bookmark,AVI,Panorama,Speed-delay)
- j Time Table

INDEX

Chapter V. Server Voice

- V -1.How to record Voice
- 2.Confirm Voice Recording





Chapter VI. Client Connection

- VI-1. Connection
 - A.Edit Site
 - B.Select connected Server
 - C.Set Camera
 - D.User Name
- VI-2. Client main screen
 - A.Client connection setup box
 - B.Audio
 - C.Site-edit
 - Sys-info
 - Save
 - D.Event-viewer
 - Message (Sending a message)
 - History

Chapter VII. Web Client

- VII-1. Connection
 - 2. Web Client Main
 - 3. Web Client Search


1. Install S/W

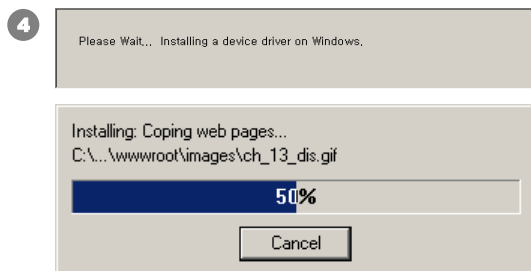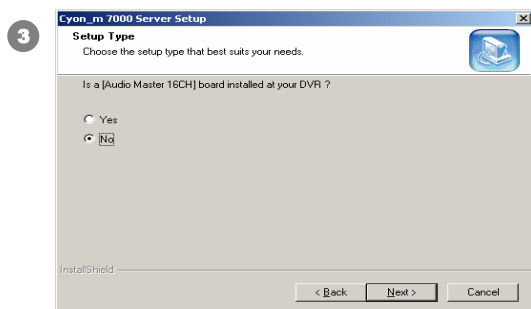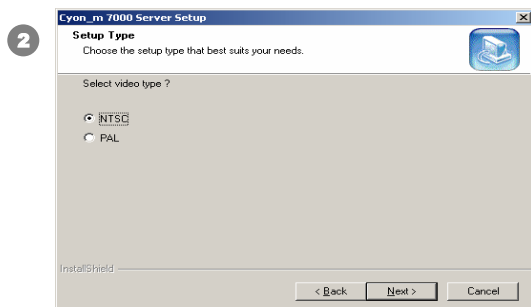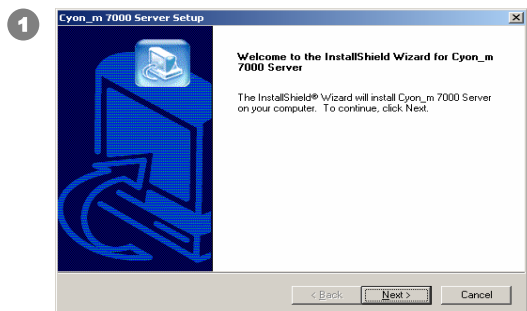


Start Server setup

Check Video type


If you use “Audio master 16ch” please check “Yes” then our S/W will be install Audio driver automatically

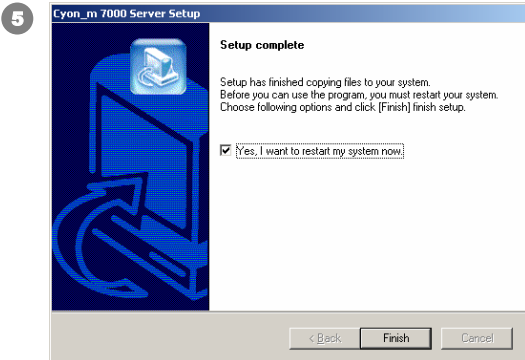

After finish installation, you must be restart the system.

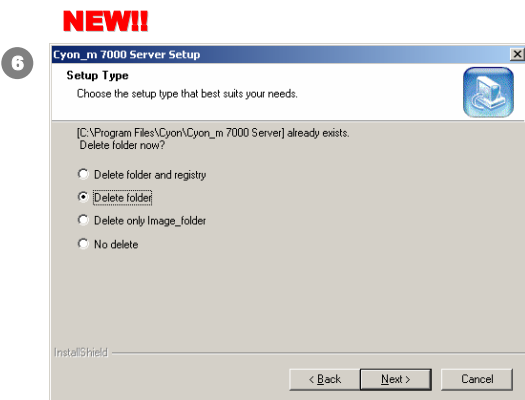

When you want S/W up-grade or re-install, you can preserve exist setting of S/W.

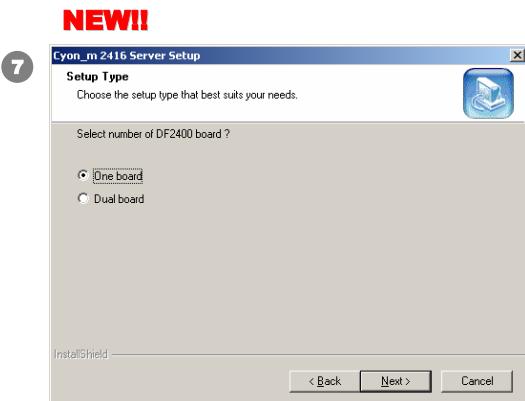

DF-2400 Only

When you install DF-2400, If you use 2boards in same system you can select no of boards.



Chapter 1.

Main Screen

EXPLANATION OF MAIN SCREEN



A. Camera Number/recording state

(: Camera No./: Normal Record/: Motion Record/: Sensor Record/
: Pre event Record/: Post event Record/: Voice record)

B. Display present images

When you click mouse right button on images, the whole images will be enlarged on screen.

When you click mouse left button on any image, the selected image will be enlarged.

C. Updated function : When program starts, updated functions will be shown.

D. Power : When you click the Power button, DVR system will be shut down

E. Auto switching (Rotation) : Displays switching images by 1/4/6/7/8/9/10/13Ch.
 in sequence with selected time interval.

F. Select camera No.

G. Select screen division among 1/4/6/7/8/9/10/13/16Ch.



Channel buttons will be changed up to your system configuration.

(4ch mode, 8ch mode, 16ch mode)

☐ 4ch mode : 1/4 ch screen division is only available.

☐ 8ch mode : 1/4/6/7/8 ch screen division is only available.

EXPLANATION OF MAIN SCREEN

H . Time : Display current time






I . PREVIEW Preview

: Display present recording images.



J. SYS-INFO System Information

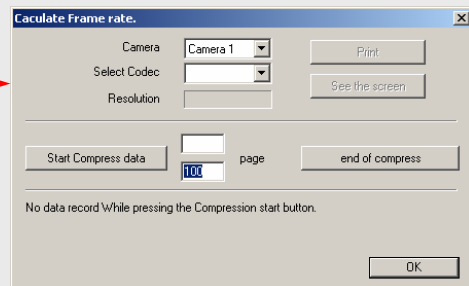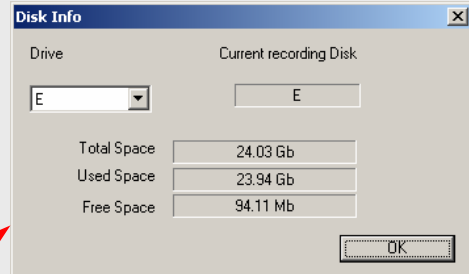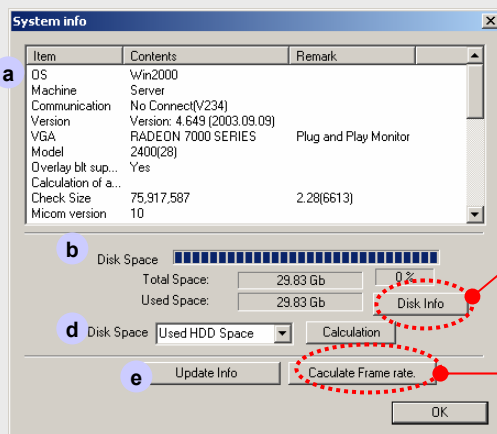

a. System Configuration : OS, S/W machine, Network connection state, S/W Version, VGA model name, Capture Board Model name, HDD space calculation, Memory, etc.

EXPLANATION OF MAIN SCREEN

b. HDD Space Information

c. **Disk Info** : Present HDD usage display. If you have one more drives, then scroll down the drive letter required and can get the other HDD information.

d. **HDD Space Calculation** : If you click "Calculation" button, DVR calculates total recording time and display the result in "System Information". To calculate the other HDD types, Scroll down and choose. Click "Calculation" button.

e. **Update Info** : The list of S/W updated information will be displayed.

f. **Calculate frame rate** : Click this button to load frame size calculation program. After selecting camera, click "**Start Compress data**" button. It will automatically calculate frame size according to codecs and resolutions. When calculation is finished, you can click "**Print**" or "**See the screen**" button to see the result.


K.  : **Button for activating 'SETUP' Mode.**

L.  : **Button for activating 'SEARCH' Mode.**

M.  : **History & Message**



- **History** : It will show the list of historical log on system operation.

-  **Sending a message** : If you click  button, then following window will show.

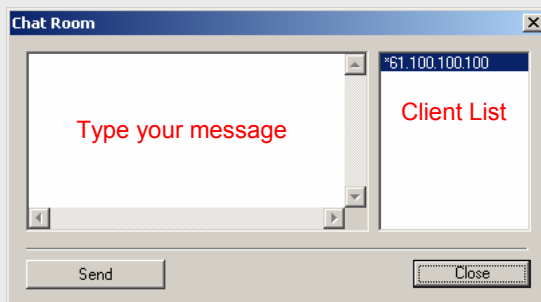

Type your message and click 'Send' button, then following window will show. Here you can register user's name. (Next time don't ask user's name.)


Also, You can register user's name in 'Control User Access/SETUP'. If you enter user's name, then DVR server send a message to client.

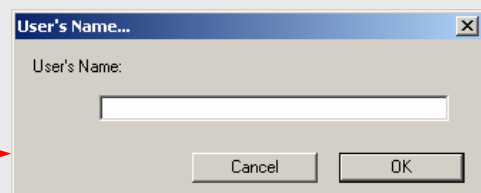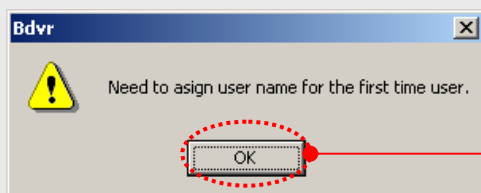

EXPLANATION OF MAIN SCREEN



☞ You can change color value in main screen mode. If you click mouse left button over 1 second on your desired channel to adjust color setting, then dialogue box will open. You can adjust color setting for each video input.

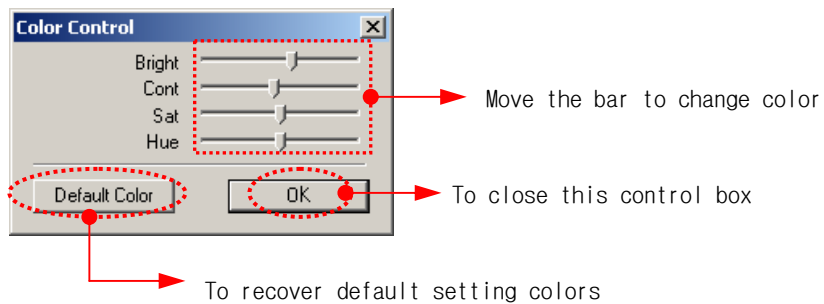

EXPLANATION OF MAIN SCREEN




☞ You can change division images to other positions. Just drag a image and drop to the desired position.



This feature of position moving is available in PD-900, 1000, 1500, 2400, and 3000 model.

PAN/TILT CONTROL


N PAN/TILT CONTROL

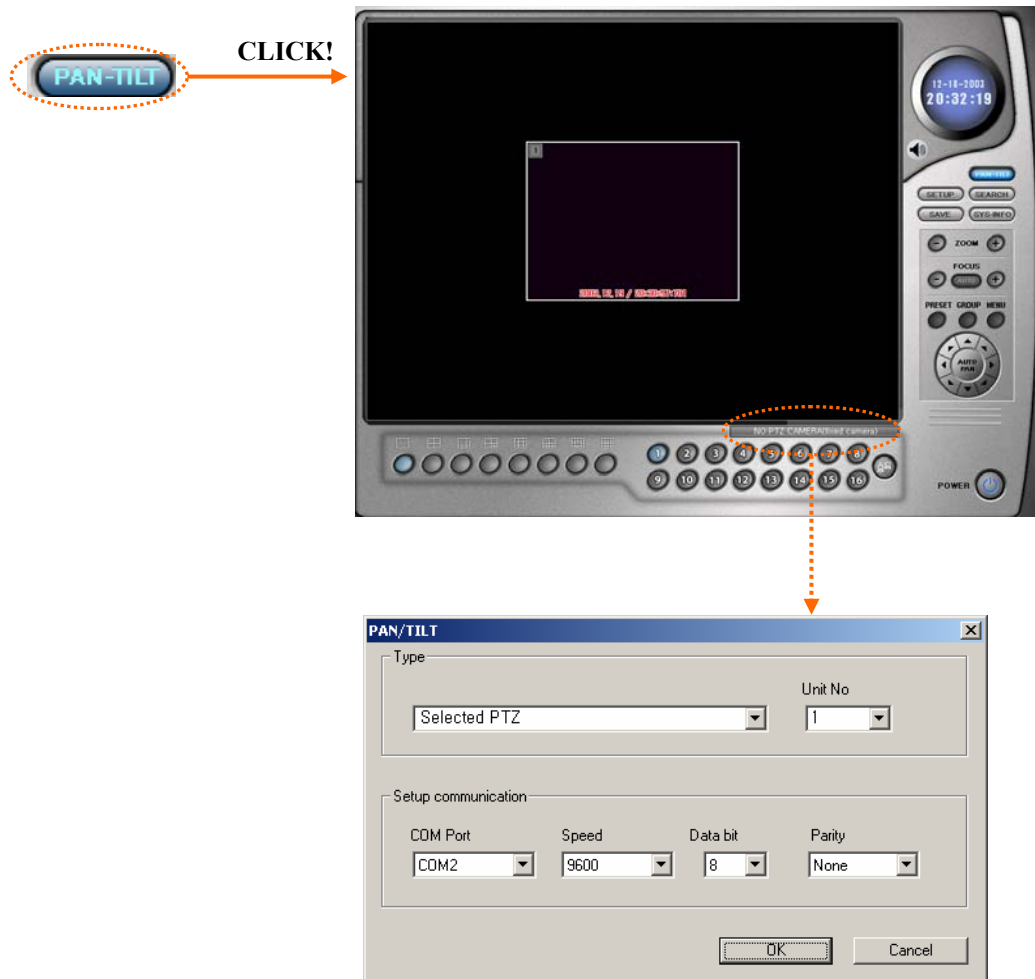


You can change PTZ settings in main screen mode.

1. Select the specified channel for PTZ setting and click PAN/TILT button.
2. Click PTZ control tab on bottom of screen
3. In dialogue box, you can choose PTZ driver, Unit No, COM port, and Baud Rate, etc.
Also you can change the PTZ settings in SETUP mode.

PAN/TILT CONTROL

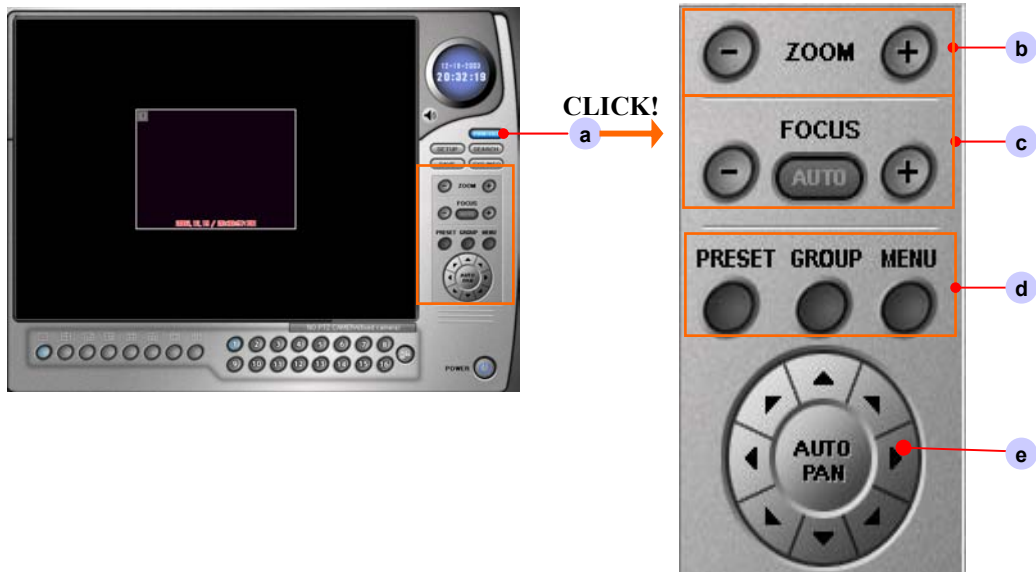

N. PAN/TILT control : Clicking this button, you can drive Pan, Tilt and Zoom device. This control can be used by PAN/TILT setting in Setup

 **Note :** In order to make correct working for P/T/Z, you need to assign correct driver for specific device.

a. In order to activate executed P/T/Z Control, click “PAN-TILT” button, and then select channel to control. Go back to main mode once more click.

b. Zoom : Zoom In / Out.

c. Focus : Control Focus.

d. Preset / Group / Menu (Refer the next page)

e. Change position with direction keys

PAN/TILT CONTROL

d Preset / Group / Menu

(1) Preset **PRESET** : Setup Preset.



Note : Some PTZ doesn't activate if system doesn't support this feature, please refer PTZ manual or contact your supplier for more details.

Setup Preset

Camera No 1

Selected PTZ

* Preset List :

- 01:
- 02:
- 03:
- 04:
- 05:
- 06:
- 07:
- 08:
- 09:
- 10:
- 11:

☒ Show blank ID

Set Preset:

- Click Preset # in list box, and enter Preset ID
- ID:
-
- Move to a desired position.
-
-
-
-

1. **Camera No.** : Camera ID to control.

2. **Protocol** : Selected protocol in Setup mode will be displayed.

3. **Preset List** : Display the list you want to change and save.

4. **Go to Preset** : Select a preset No from the list and click this button then PTZ will act.
(Tested preset must be saved before.)

5. **Preset ID** : Insert the name for preset

6. **Save ID** : Click this button to add on the preset list.
(for example "?Test" display)

Move to a desired position.

7. **Set Preset** : To save the preset when finished to move to a desired preset position.
(for example "Test" display)

8. **Delete Preset** : Delete undesired preset from the preset list.

Setup event Preset

* When event happen

go to preset # : A

dwell time(sec) : B

go back to Preset # :

9. Set Event Preset

: Preset setting for the event.

Step by step, select desired position to go at scroll list A.

And set delay time B.


The last, select desired position to go back to scroll list C.

Note : If the system power off and restart while PTZ Auto Group is performing, PTZ Auto Group Function will be performed automatically after restarting the system.

17

PAN/TILT CONTROL

(2) Group : Setup Preset Group.

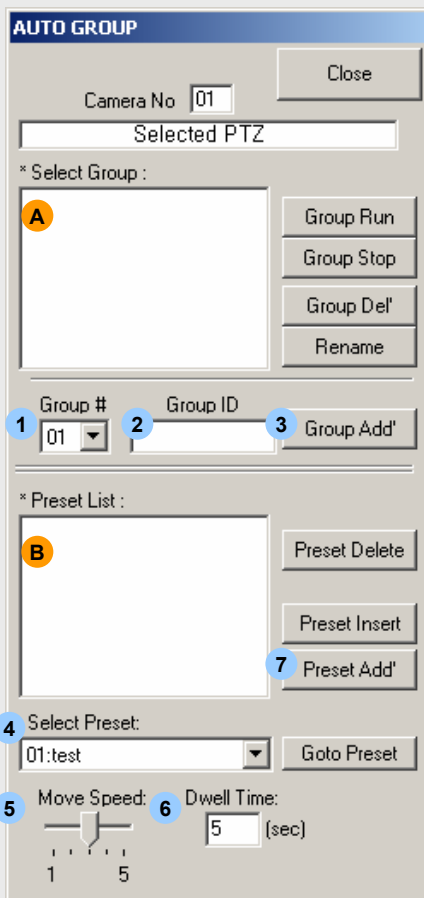


Note : Some PTZ doesn't activate if system doesn't support this feature, please refer PTZ manual or contact your supplier for more details.

How to use Auto Group


1. Select Group No. 1
2. Type Group Name 2
3. Click 3 to add Group List on A.
4. Select Preset No. 4
You can test preset by Click **Goto Preset**
5. Select Moving time to next position.
6. Enter Dwell time for the position.
7. Add the preset.
To add more preset, Repeat No.4~7
8. Repeat No. ①~⑦ to add more groups.
9. Select a desired group on A and click **Group Run** to run a Group.
10. Click **Group Stop** to stop a Group.

Note : If the system power off and restart while PTZ Master Controller is in use, PTZ Master Controller will be in use after restarting the system.

PAN/TILT CONTROL

(3) Menu  : Setup OSD menu.

This is used to control auxiliary camera functions.

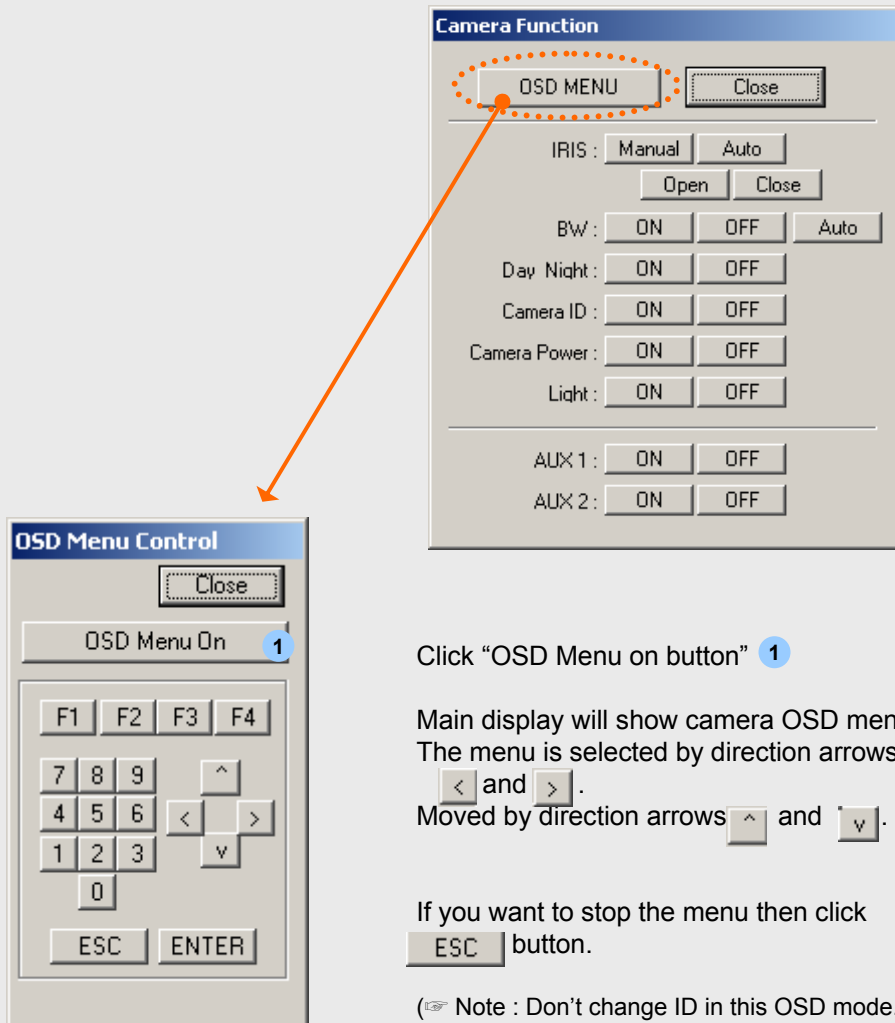

Camera Function

OSD MENU Close

IRIS : Manual Auto

Open Close

B/W : ON OFF Auto

Day Night : ON OFF

Camera ID : ON OFF

Camera Power : ON OFF

Light : ON OFF

AUX 1 : ON OFF

AUX 2 : ON OFF

OSD Menu Control

Close

OSD Menu On **1**

F1 F2 F3 F4

7 8 9 ^

4 5 6 < >

1 2 3 v

0

ESC ENTER

Click "OSD Menu on button" **1**

Main display will show camera OSD menu.
The menu is selected by direction arrows < and >.
Moved by direction arrows ^ and v.

If you want to stop the menu then click ESC button.


(Note : Don't change ID in this OSD mode. It will lost control.)




Chapter 2.

Server Set Up

STANDARD SETUP

K  go to **"SETUP"** mode

(1) STANDARD : after system installation, setup as user's requires.

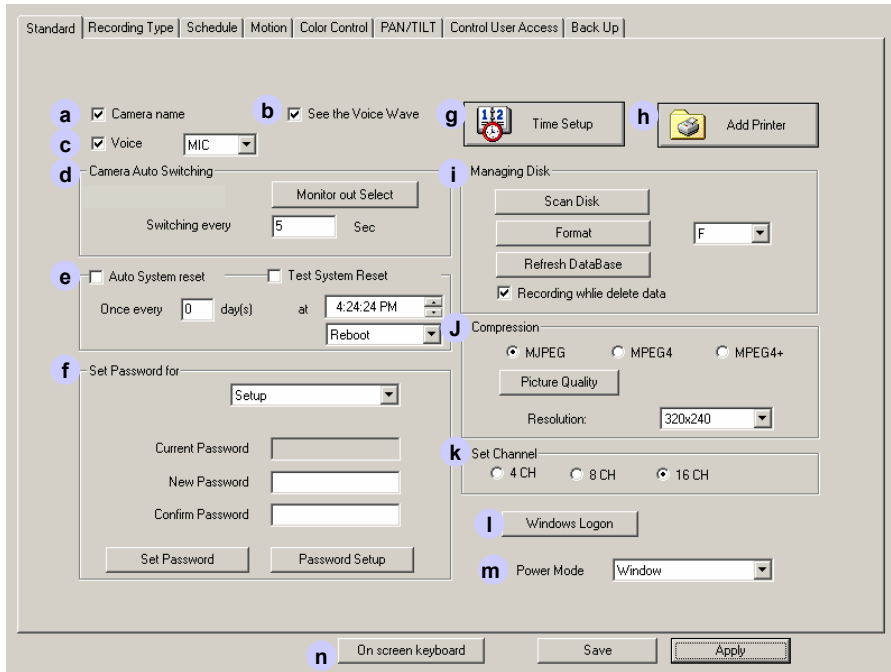

The screenshot shows the 'STANDARD' tab of a configuration window. It contains several sections: 'Camera name' with a checked checkbox (a), 'Voice' with a checked checkbox and a dropdown menu (c), 'Camera Auto Switching' with a 'Switching every' field set to 5 and a 'Monitor out Select' button (d), 'Auto System reset' and 'Test System Reset' checkboxes (e), 'Set Password for' with a dropdown and password fields (f), 'Time Setup' with a clock icon (g), 'Add Printer' with a printer icon (h), 'Managing Disk' with 'Scan Disk', 'Format', and 'Refresh DataBase' buttons (i), 'Compression' with radio buttons for MJPEG, MPEG4, and MPEG4+ (j), 'Picture Quality' button (j), 'Resolution' dropdown set to 320x240 (j), 'Set Channel' with radio buttons for 4 CH, 8 CH, and 16 CH (k), 'Windows Logon' button (l), 'Power Mode' dropdown set to Window (m), and 'On screen keyboard' button (n). At the bottom are 'Save' and 'Apply' buttons.

a. Camera Name ☒ : Check it for displaying camera title on screen.

b. See the voice wave : You can check the audio signal input state.

c. Voice ☒ : Check it for recording the voice. You can select two types of input, mic and line.
If your Windows OS can not sound, this button is not activated.
(☞ Note : To communicate with client and server, don't check this.)

d. Camera Auto Switching

- Switching time : To set the dwell time for sequential switching display on main and analogue monitor. Switching time will be available to both equally.


- Event Spot Monitor : If check this option, when event is happened, analogue monitor show up the event channel.

(☞ Note : If you check this, you can not use analogue monitor switching.)

STANDARD SETUP

Monitor out Select


: Click this button, following window will open.

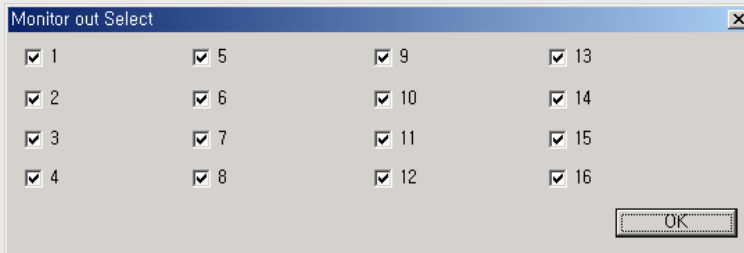

And select cameras to be displayed in analogue monitor.

(Note : This feature is not available in some models like 5000, 6000, 7000 and old 2400.)

e. These features are to set DVR reboot or shutdown schedule.

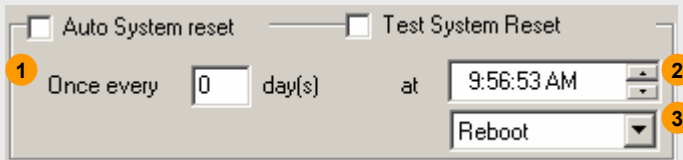

Auto System Reset: ☒ Check it for scheduled rebooting or shutdown the system.


1. Set the interval as your wish. If you want to set rebooting every day, then enter 1 in the day content.
2. Set the time.
3. Scroll down and choose '**Reboot**' or '**Shut down**'.

Test System Reset : This feature is to check PC system rebooting safely.

(Note : If you check '**Test System Reset**' and click '**Apply**' button to go out setup mode, then DVR system is turned down and PC system will reboot promptly.)

STANDARD SETUP

- f. **Password** : There are two types of password setup. The one will be used by basic method and the other will be used by professional method.

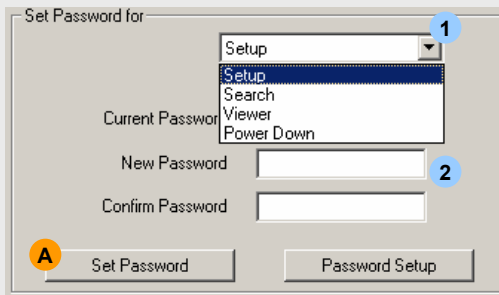


The 'Set Password' dialog box has a dropdown menu (1) with options: Setup, Search, Viewer, and Power Down. Below it are input fields for 'Current Password', 'New Password' (2), and 'Confirm Password'. At the bottom are two buttons: 'Set Password' (A) and 'Password Setup'.

How to use Set Password

1. Scroll down the list (1) and select one in which Setup/Search/Viewer/Power down mode.
2. Enter new password and confirm password.
3. Click **"Set Password"** button (A)
4. To setup more password for other mode, repeat previous procedure.

Click **"Password Setup"** button (B) then display following popup window.

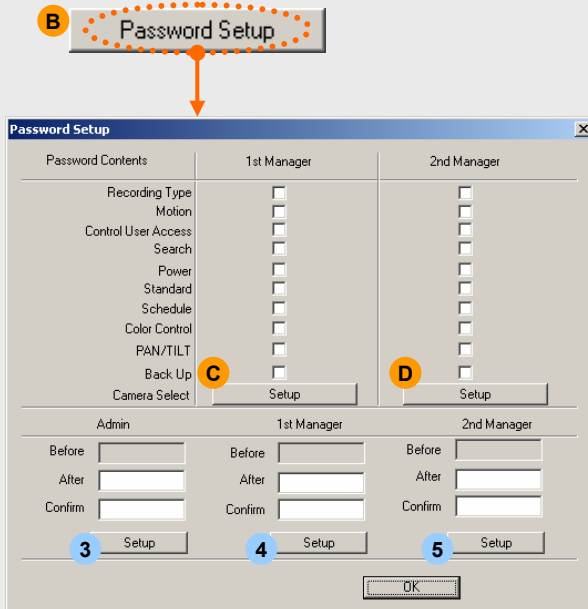

The 'Password Setup' dialog box is divided into three columns: Admin, 1st Manager, and 2nd Manager. Each column has a 'Setup' button (C, D, and E respectively) and a 'Camera Select' button (C, D, and E respectively). Below these are input fields for 'Before', 'After', and 'Confirm' passwords. At the bottom is an 'OK' button.

How to use Password Setup


1. Enter password for Admin.
2. Click **"Setup"** button (3).
3. Check the 1st Manager's boxes to give authorities.
4. Click **"Setup"** button (C) and select cameras to view in Main and Search mode.
5. Enter password for 1st Manager.
6. Click **"Setup"** button (4)
7. To setup 2nd Manager, repeat as same as 1st manager's procedure.
8. Click **"OK"** button to finish.

Admin has all authorities.
1st and 2nd manger have only checked authorities.

Note : The passwords (B) is prior to passwords (A).
If you set two passwords at a time, then passwords (A) is neglected.

STANDARD SETUP


g. Time setup : Setup time of system.

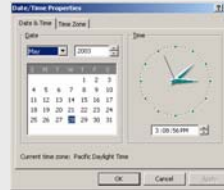


h. Add Printer : Add printer as user's require.




Click ! **Next**.

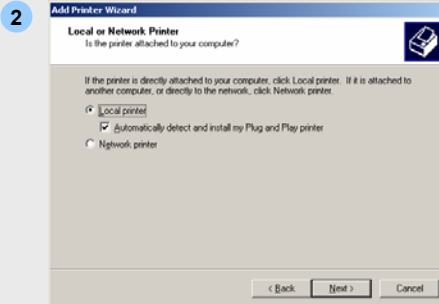


Select local or network printer.

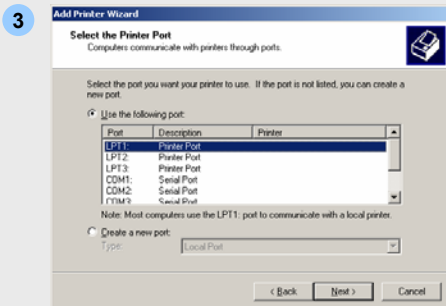


Select printer port and click **Next**

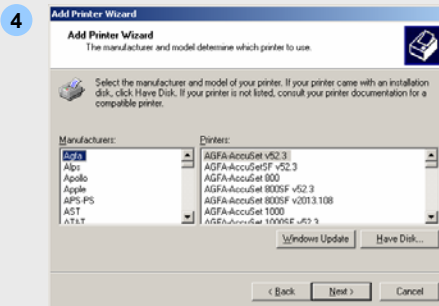

Select a manufacturer and model.

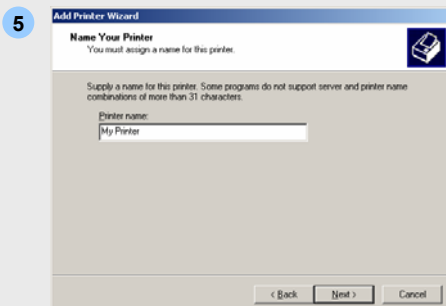

Enter printer name and click **Next**.

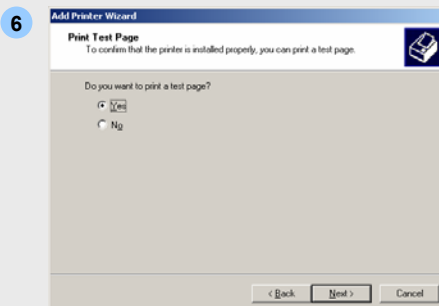


After printing test, click **Finish**.

STANDARD SETUP

i. Managing Disk :


< Providing Scandisk >

- windows 98, Me : scandisk.exe
- windows 2000 : chkdsk.exe

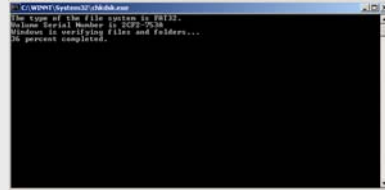



< Format Disk function >

You can add more hard drives to install.

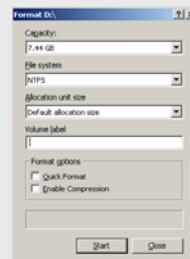

< Refresh Database >


Fragmented DB structure will be refreshed.

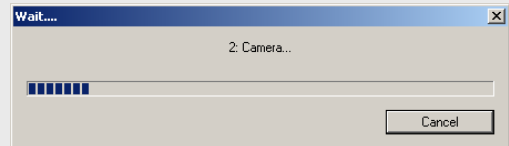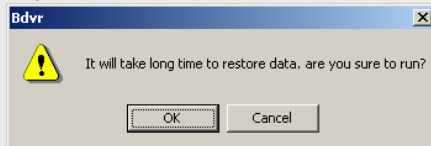

< Recording While Delete Data >



If you check it : when HDD is full, DVR system will overwrite the oldest data with latest data.

If you don't check it : when HDD is full, you can see the below pop up message and DVR rings beep sound per 1 second term.

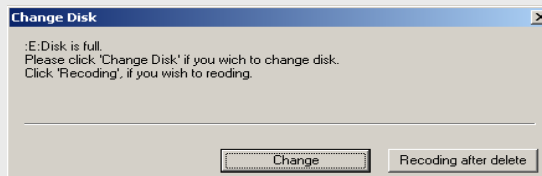

j. Compression : Select compression method.

(MJPEG/ MPEG4/MPEG4+ with 320x240/720x240/720x480 resolution)

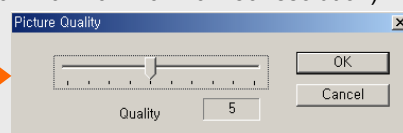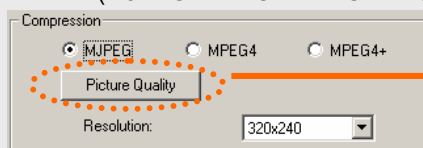


☞ Click 'Picture Quality' and adjust it as user's requires.

STANDARD SETUP

k. Set Channel

: Click select appropriate input no. of DVR.

 
(Note : When you use no video input at specific channels, please set it to no display and no record from Recording Type / SETUP.)

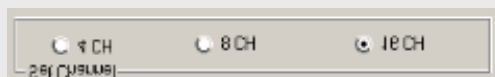

Channel Mode	Minimum No. of cameras to be installed
4 CH	1 camera
8 CH	4 cameras
16 CH	8 cameras

l. Windows Logon : If your windows system needs ID and Password to log on, then enter ID and Password to log on by DVR system automatically.

 m. Power Mode : Select desired power mode when you shut off DVR System by clicking 'Power' button in Main mode.

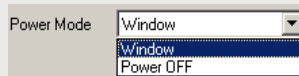

① **Window** : Go to Window Mode when you click 'Power' button.

② **Power OFF** : Shut down DVR system when you click 'Power' button.

n. On Screen Keyboard : Virtual keyboard is open. It is useful to type letters by mouse without real keyboard.



RECORDING TYPE

(2) RECORDING TYPE

Camera			Recording Type					Alarm Control																
NO	Display	Position	Event	Frame (1-30)	Pre	Post	Sensor type	Time	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
1	Ok		Record	8	0	0	o	0
2	Ok		Record	8	0	0	o	0
3	Ok		Record	8	0	0	o	0
a	b	c	d	e	f	g	h	i	j
5	Ok		Sensor	8	0	0	o	0
6	Ok		Record					o	0
7	Ok		Record					o	0
8	Ok		Record					o	0
9	Ok		Record					o	0
10	Ok		Record					o	0
11	Ok		Record	8	0	0	o	0
12	Ok		Record	8	0	0	o	0
13	Ok		Record	8	0	0	o	0
14	Ok		Record	8	0	0	o	0
15	Ok		Record	8	0	0	o	0
16	Ok		Record	8	0	0	o	0

k Auto Camera Search l Set ALARM Event> m Event setup ☐ Record Motion/Sensor Event n

On screen keyboard Save Apply

a. Camera Number

b. Display : You can choose 'OK' or 'None' by mouse click. **Hidden camera function.**

'None' selected camera does not show images on the screen while recording so that people can not notice it is recording. **Also you can hide some cameras in Password Setup.**

c. Position : Click the left button of mouse where you want and enter the camera name as you want.

d. Event : You can select one of various recording type by clicking right mouse button or dragging. (Record, Rec/Mot, Rec/Sen, Sensor, Motion, Schedule, and No Record.)



Sensor : You can connect each different Sensor to every different Camera.

e. Frame : Adjust recording frames for each channel. Set number of recording frames for all channels at once by clicking right button of mouse after select block. (frame/sec)

RECORDING TYPE

f. Pre : Pre- Alarm function. Setup recording frames before event happens.

g. Post : Post- Alarm function. Setup recording frames after event happens.

h. Sensor Type : Select the sensor type. Normal Open / Normal Close Type

C : Normal Close type sensor

O : Normal Open type sensor

i. Time : Set the running time of the alarm control outputs.(seconds)

j. Alarm control

• : Alarm control off

O : Alarm control on


k. Auto Camera Search : Click this button for searching video input signal. If DVR system detect no camera input in some channels then their display setting **b** and record setting **d** will be automatically set 'None' and 'No Record'. (☞ This feature is available in 5000, 6000, and 7000 models)

I. Set Alarm Event




< Check Video Loss >

: To set one alarm to notice when video signal is lost or unstable.

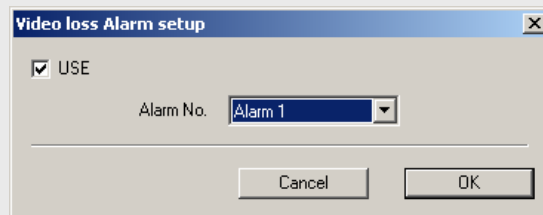

< Set recording state signal >

: To set one alarm to notice whether recording state is stable or not.

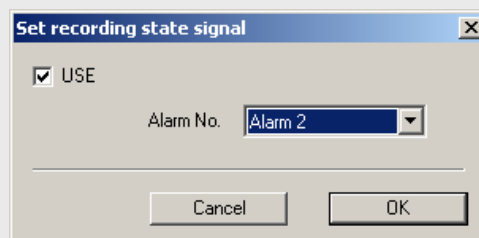


RECORDING TYPE

m. Event Setup

: To set event channels to pop up in main mode and to use PTZ preset.


1. Scroll down and choose specified channel (**this channel must be set motion or sensor recording type**).

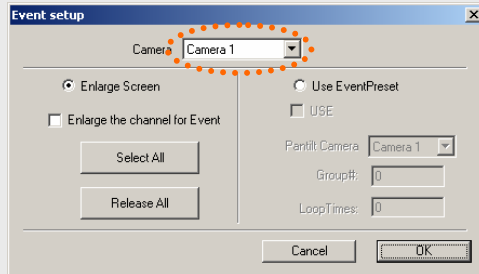

2. Click 'Enlarge Screen' radio button, and check 'Enlarge the channel for event' option.

If an event is happened, the event channel will pop-up as full as screen. First event keeps full screen (unless any other event or mouse click) and then the other event can be popped up 5 seconds later.

3. Click 'Use Event Preset' radio button, and check 'Use' option.

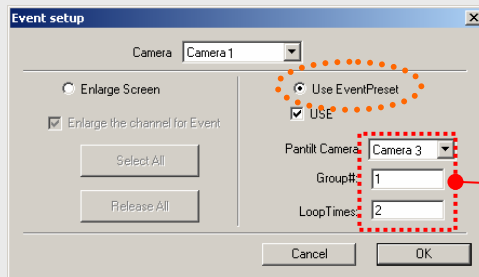

This setting value is how camera drive for event.

If you want to use this feature, set up preset and group in main mode.(to see "Pan/Tilt Control" at "Display Mode" chapter.)

- n. Record Motion/Sensor Event :** Check this for making an event log. Event log can be read in "SERARCH" mode.

SCHEDULE SETUP

(3) SCHEDULE

☞ Set reservation schedule for recording.

Standard | Recording Type | **Schedule** | Motion | Color Control | PAN/TILT | Control User Access | Back Up

Camera position: CH 1

Camera

a

- camera 1 ☒
- camera 2 ☐
- camera 3 ☐
- camera 4 ☐
- camera 5 ☐
- camera 6 ☐
- camera 7 ☐
- camera 8 ☐
- camera 9 ☐
- camera 10 ☐
- camera 11 ☐
- camera 12 ☐
- camera 13 ☐
- camera 14 ☐
- camera 15 ☐
- camera 16 ☐

	SUN	MON	TUE	WED	THU	FRI	SAT
00:00							
01:00							
02:00							
03:00							
04:00							
05:00							
06:00							
07:00							
08:00							
09:00							
10:00							
11:00							
12:00							
13:00							
14:00							
15:00							
16:00							
17:00							
18:00							
19:00							
20:00							
21:00							
22:00							
23:00							

b

c

Record | Sensor | Motion | Rec/Sen | Rec/Mot | Mot/Sen | R/M/S | Cancel

On screen keyboard | Save | Apply

a. Channel : Select camera number to record by schedule.

b. Schedule area : Choose day and time which you wish to record.

Click or drag mouse on the time table to make block area.

c. Buttons : Choose recording type in buttons **c** or click mouse-right button on the block.


If you want to use recording schedule, then go back to “**SETUP/RECORDING TYPE**” set recording type as “**Schedule**” .

When you want Motion Detection recording by schedule, “**SETUP/RECORDING TYPE**” set recording type as “**Schedule**” and Motion detection area and channels must be set up correctly.

MOTION SETUP

(4) MOTION

☞ Select the area for motion detection with mouse.

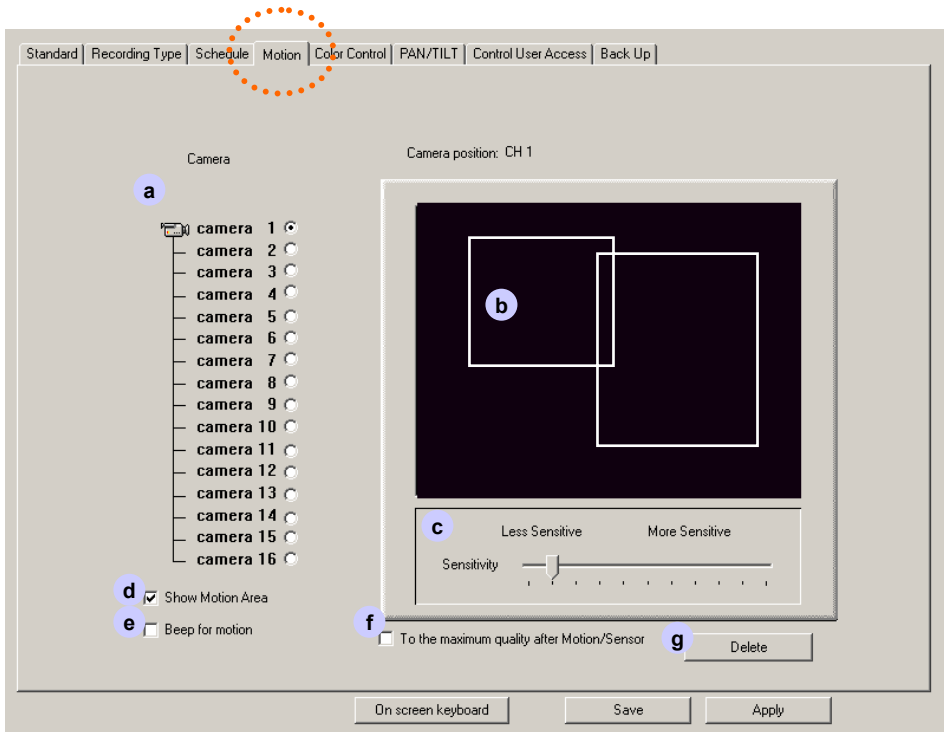

a. Channel : Select the specific camera.

b. Motion area : To select motion detection area, move the mouse pointer to the desired area and select the range by dragging the mouse. Motion detection range area is available to set without limit.

If you don't set any motion area, then motion area in view is selected.

c. Sensitivity : Move the bar to adjust the sensitivity of Motion detection.

d. Show Motion Area : Show motion area box's line to change red line when motion is detected. During setup mode, you can test motion sensitivity and set it up.

e. Beep for Motion : Speaker will sound beep when motion is detected.


f. To the maximum quality Motion/Sensor : In "Recording Type" setup, motion or sensor record type is set. And check this option for the best quality's recording when event has happened.

g. Delete : Selected motion area or all motion area will be deleted.

COLOR SETUP

(5) COLOR CONTROL

☞ Setup the color of pictures.

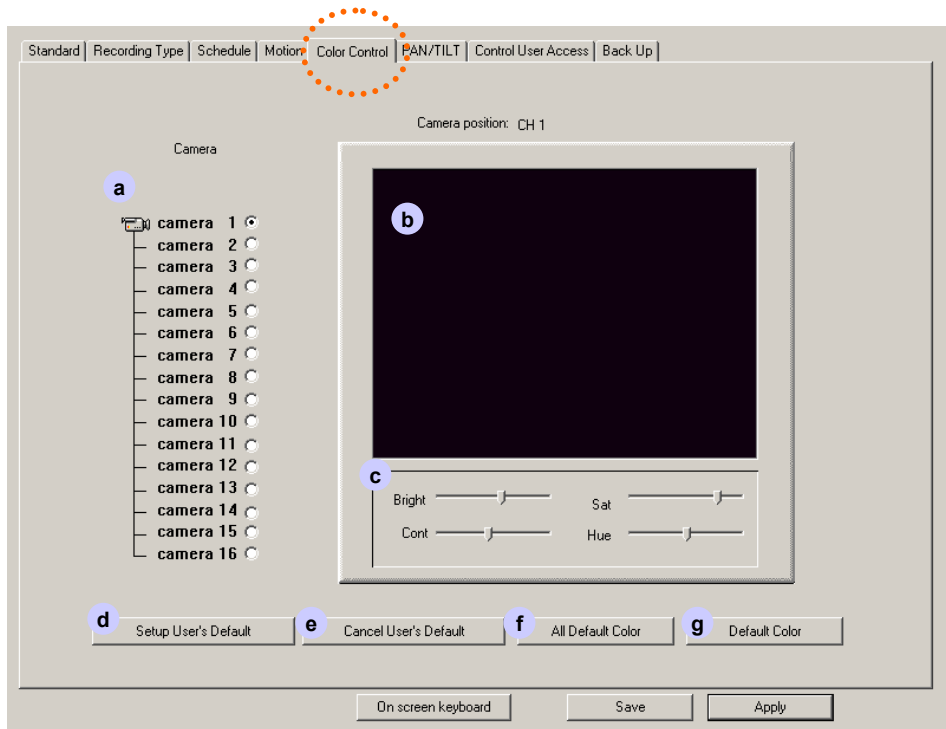

a. Channel : Select a desired camera No.

b. Color area : The selected camera image is displayed.

c. Bright : Adjust brightness of the image.

Saturation : Adjust saturation of the image.

Contrast : Adjust contrast of the image.

Hue : Adjust hue of the image.

* Move the bar to adjust the images.

d. Setup User's Default : Setup present colors to your desired Default Color

e. Cancel User's Default : Cancel user's Default Color to recover DVR Default Color.

f. All Default Color : Set All Camera to user's Default Color.

g. Default Color : Set a desired Camera to user's Default Color.

PAN / TILT SETUP

(6) PAN/TILT

☞ Setup PTZ controller.

The screenshot shows the 'PAN/TILT' configuration window. The 'PAN/TILT' tab is highlighted with an orange dotted circle. On the left, a list of cameras from 'camera 1' to 'camera 16' is shown, with 'camera 1' selected. To the right of the list are two buttons: 'User edit...' (labeled 'b') and 'Master Controller...' (labeled 'c'). Below these is a 'Type' section (labeled 'd') containing a 'PTZ Model' dropdown menu (showing 'NO PTZ CAMERA(fixed camera)') and a 'Unit No' dropdown menu (showing '1'). Below the 'Type' section is a 'Setup communication' section (labeled 'e') with four dropdown menus: 'COM Port' (showing 'COM2'), 'Speed' (showing '9600'), 'Data bit' (showing '8'), and 'Parity' (showing 'None'). At the bottom of the window are three buttons: 'On screen keyboard', 'Save', and 'Apply'.

a. Channel : Select camera No.

b. User Edit : See next page.

c. Master Controller : See next page.

d. Type : Choose RX brand or Model name and Unit No(PTZ controller ID). Multiple PTZ device can assign controller ID from 0 to 127. It is useful when camera ID and controller ID don't match.


e. Setup Communication : Set COM port, Baud rate, Data bit and Parity. Please see your PTZ manual.

PAN / TILT SETUP

b. User Edit

How to set new type controller

If you cannot find RX brand and model name. You can edit PTZ protocol for new RX.

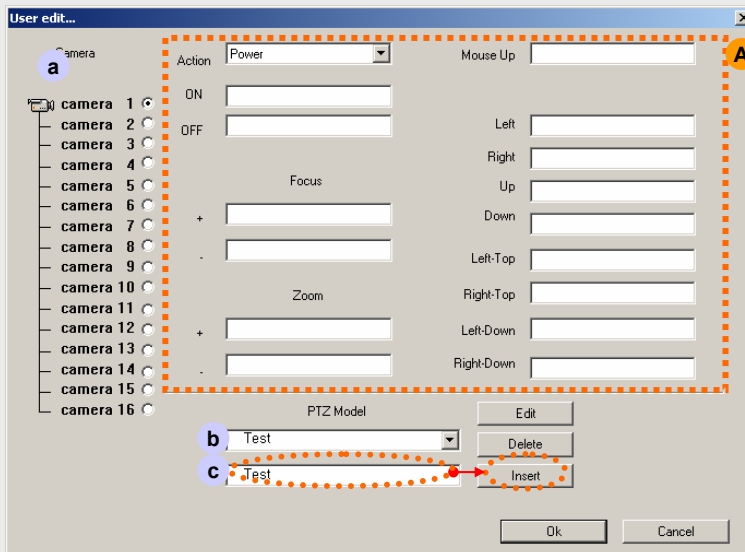

1. Select camera No **a**.
2. Type new RX brand or model name on **c**.
3. Type protocol code in **A**. Please refer your PTZ manual.


c. Master Controller

How to use PTZ Master Controller

This feature is very useful if one specific controller should control multi PTZ drivers.

DVR system change controller's commands to fit other PTZ protocol and send control commands to drive.

1. Select controller for using master.
2. Set COM port, Baud rate, Data bit and Parity.
3. Click **OPEN Master Controller** button to load master controller into DVR system.

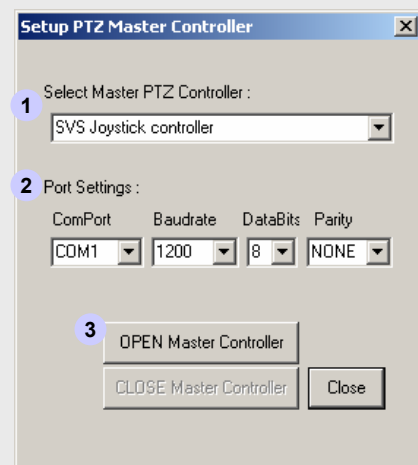

CONTROL USER ACCESS

(7) CONTROL USER ACCESS

☞ Select type of network

a. Connection : Select **TCP/IP** for Remote Access.

Select **No connection** when you don't connect client site via network.

b. Port : Client access to server by port No. as your network circumstance. Default No. is 2000.

Caution : If you change server port No. you must be change the Client port No.

c. Check IP: Check IP Address

And If network of system use two IP, you can choose IP.

d. Transmission Speed and Image quality

Audio compression transmission : If you check this function, the compressed audio data will be transmitted to Client site.


e. Insert ID and Password

: Confirm to access when certain IP and Password were already registered or refuse to connect. Enter new ID and Password and click **"Add"** button.


f. Connected Client List : Client who connect from remote site will be checked.

CONTROL USER ACCESS

- g. Web Server :** When you click TCP/IP radio button, web server is loaded automatically.
It allows client to connect with web browser via internet.

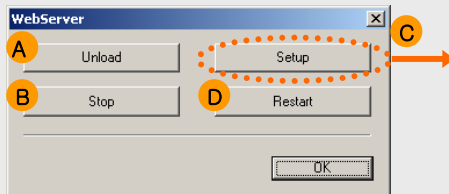


- A ;** Delete server process from memory.
B ; Cut off internet access.
C ; You don't need to change this default setting. Please Change after contacting with network manager.
D ; Restart web server process.

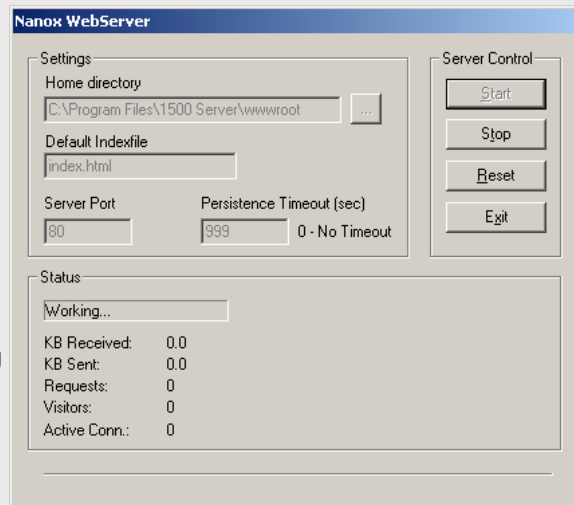

h. Voice communication

- : Communicate with server and client.
Check "use" and select connected client.
In Standard setup, don't check voice recording and select line input.
Your microphone connect to PC's audio line.
(**Note :** When you use this feature, you can't use voice recording at the same time.)

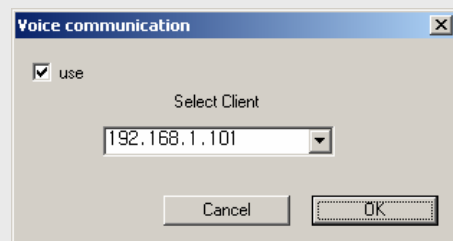


NEW!!

i. TCP/IP setup

- : You can check or fix of TCP/IP setup in Server side.


As for the characteristic of system, if you have to make two IP in same system, you must be set the each IP.

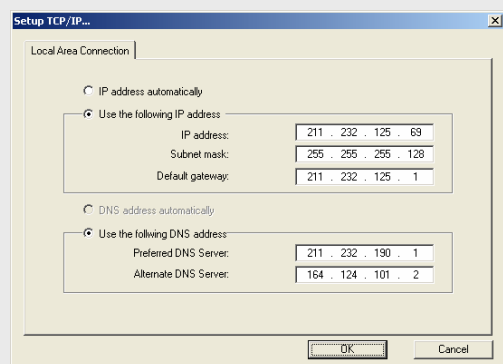



CONTROL USER ACCESS

j. Emergency Call



Set up : When you check “used” option and click “Setup” button. Following message window will show.

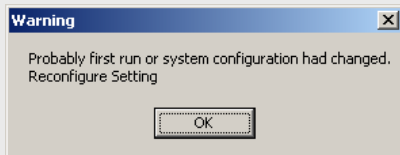

Voice modem is not found.

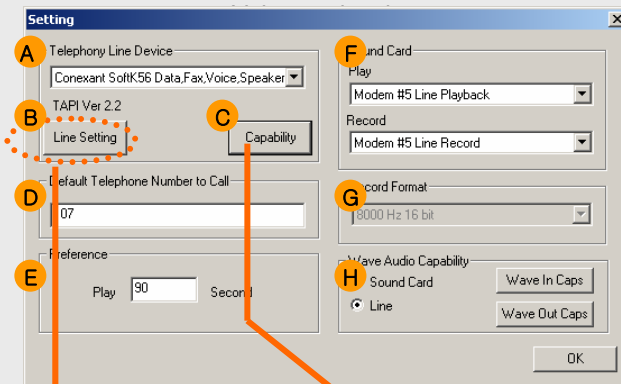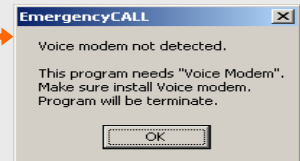

- A** ; Display model name of installed voice modem.
- B** ; Line setting dialogue will show various settings.
- C** ; Display current voice modem information.
- D** ; DVR system will call this Telephone No.
- E** ; DVR system will call and repeat reserved alert message during desired time.
- F** ; Confirm Voice modem's sound card settings.
- G** ; Recording format of sound.
- H** ; Confirm Voice modem's wave audio settings.

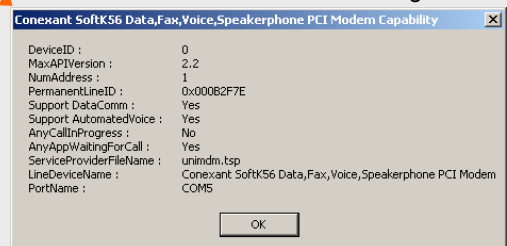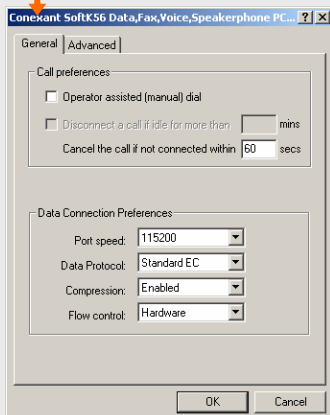

👉 You don't need to change this setting except **D** and **E**. If you want to set up then please refer your Voice Modem's Manual.

Set camera : You can set Emergency call per every camera.




CONTROL USER ACCESS


How to make your own voice file for Emergency Call.

1. Record your desired voice as below.

(Click "Start" button -> Program -> Accessories -> Entertainment -> Sound Recorder)

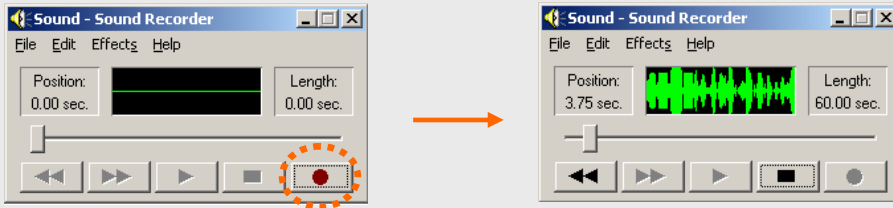


2. Save the file name as **"TempC.wav"** with **8kHz 16Bit Mono**.

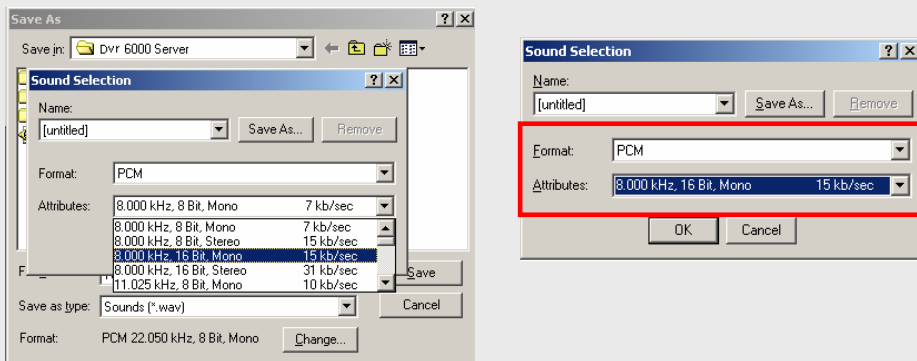


3. Save or copy new **TempC.wav** file to DVR folder

EX) C:/Program files/DVR/DVR 6000 server

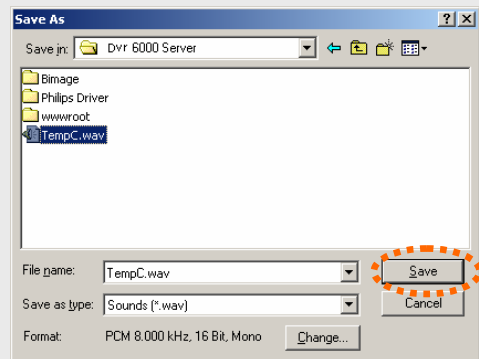

4. Click "OK"

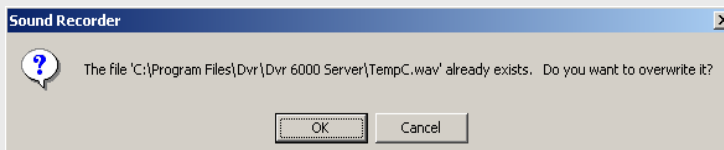


CONTROL USER ACCESS

k. IP Server

: This feature support dynamic IP server connection. The reason why dynamic IP address can not keeps static to use as server address . So if you registered your dynamic IP server in IP server. The IP server remember those dynamic IP servers and can link them with client's connection request.

How to use IP server.

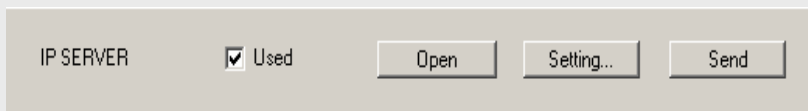


IP SERVER ☒ Used

When you check ☒ , buttons will be activate.

1. Click to enter server's name.

Write down your own registration name and click "OK" button.

And after click "OK" button, You must be click "Send" button.

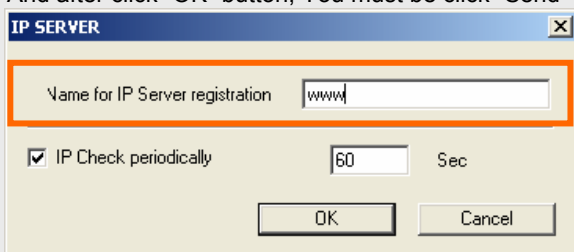

IP SERVER

Name for IP Server registration

☒ IP Check periodically Sec

NEW!!

If you check " IP check periodically" our S/W will check changing of Dynamic IP periodically and will send changed IP to our IP server.

As for the detail, please ask to your network administrator.

2. Click to confirm and register to IP Server. You will show a message that registration is complete unless IP server has same registration name.

If you have send before or someone has already used same name, then you will show the message "The name is already exist." Please send only once or use other name.

3. Click to support dynamic IP Server. DVR server status turns "ON".



If you set Dynamic IP by above way, the system can load Dynamic IP automatically even after system rebooting.




Chapter 3.

Back Up

BACKUP SETUP/FORMAT

(8) BACK UP

8-1. Backup format

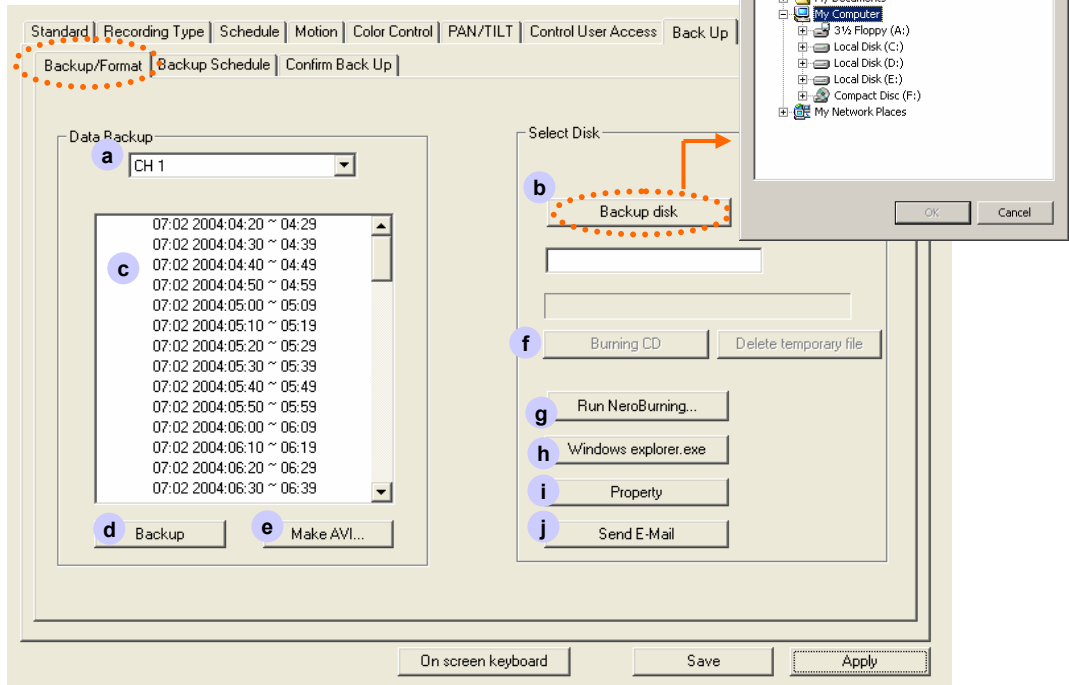

a. Channel No. : Scroll down and select channel to save.

b. Backup Disk : Select a desired folder to save data.

(Click “Backup disk” button and then **Browse for folder** will be displayed for saving data into.)


c. Time list of recording data : Select the time period for backup with mouse click.

(Click again the selected time period to deselect the time.)

d. Backup : Click to start data backup if you finished previous procedure.

BACKUP SETUP/FORMAT

e. Make AVI : Save data file to avi file format

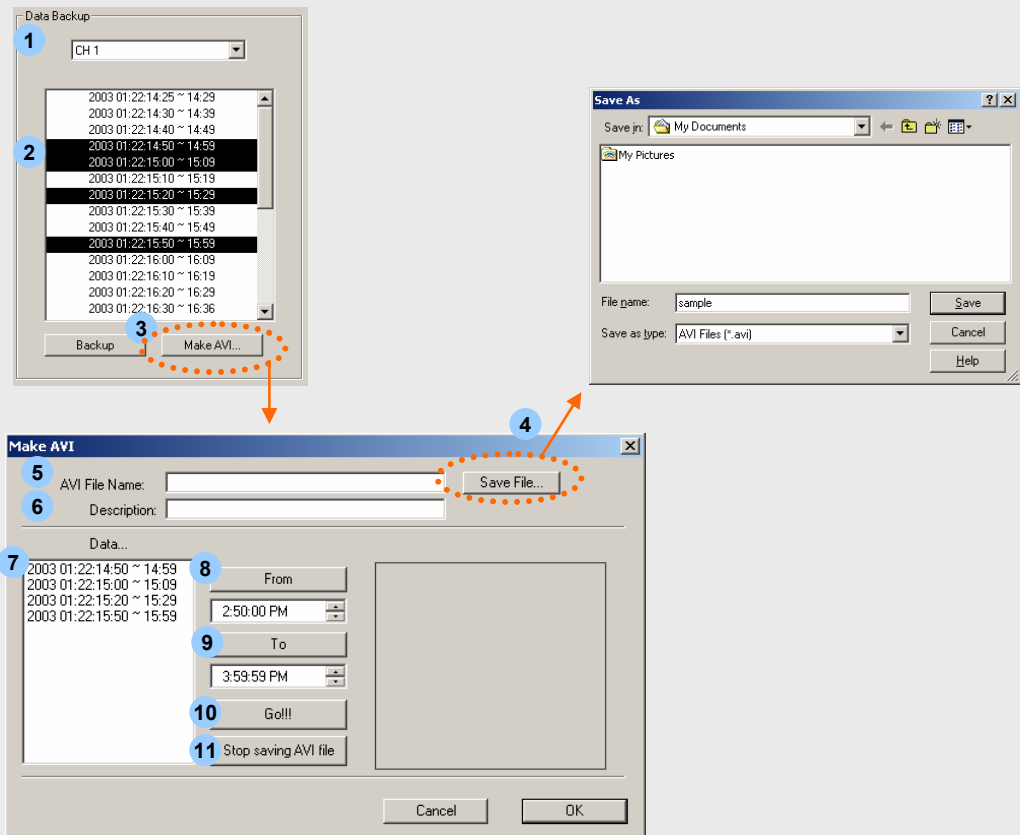

1. Select camera No.
2. Select the desired time period for backup.
3. Click “ **Make AVI** ” button.
4. Select a desired folder to save data into. And type avi file name to save
5. Entered **AVI File Name** will be displayed.
6. Type **Description**
7. Select the desired time period for backup.
8. Click “**From**” to check first data time & image for AVI file
9. Click “**To**” to check last data time & image of desired AVI file
10. Click “**Go**” to make AVI file
11. Click “**Stop saving AVI file**” to stop making AVI file.

f. Burning CD (Only Windows XP) : If you use Windows XP OS and CD-RW(CD-R) drive, you can burn a CD using the “Burning CD” function of Windows XP.

Delete temporary file : If you use the burning function of Windows XP, It will be make temporary file. So you can delete the temporary file.

g. Nero Burning Rom : Save data file using “Nero Burning Rom” .

h. Explorer : Save data file using Windows’ “Explorer”

i. Property (Only Windows 2000): Save data file using “Direct CD” program.

But if you don’t install “Direct CD” , this Property icon will be not work.

Caution : You can’t use “Nero burning Rom” & “ Direct CD” in the Same system.

So, please install just one of them.

BACKUP SETUP/FORMAT

1. **NEW!!** CD Burning Method for Windows XP

Windows XP can support burning CD

So if you use XP, we recommend using the “Burning CD” function instead of the Nero or DirectCD.

But, if you want to use Nero or Direct CD, you should install just one of them.

Please do not install both of them in the same system.


Also, after you install Nero or DirectCD you can't use the burning CD function of XP.

Caution : After installing Nero or Direct CD, if you want to use the burning CD function of XP, you have to format the system.

And then, you have to re-install Windows XP.

A. Procedure

- a. Select Back-up folder – Select CD R/W directory.
(Ex: If “F” directory has a CD R/W, you have to choose F but if “E” directory has a CD R/W, you have to choose E.
- b. Select Backup time
- c. Click Back-up icon
- d. Click “Burning CD” icon

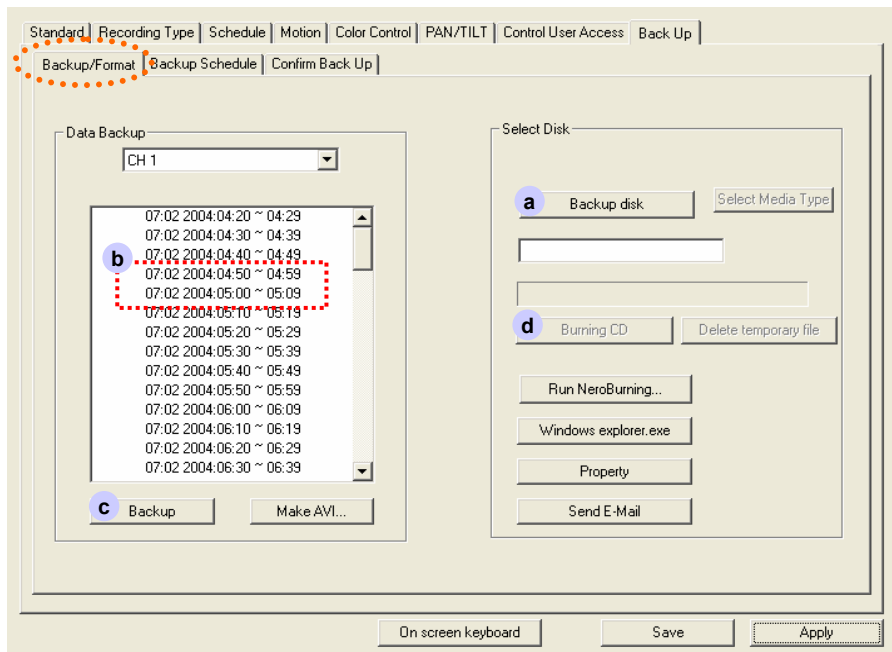


BACKUP SETUP/FORMAT

1. **NEW!!** CD Burning Method using “NERO” for Windows XP

A. Procedure

- a . Select Back-up folder – Select CD R/W directory.
(Ex: If “F” directory has a CD R/W, you have to choose F but if “E” directory has a CD R/W, you have to choose E.)
- b . Select Backup time
- c . Click Back-up icon
- d . Click “Burning CD” icon – If your system has NERO, when you click the “Burning CD” icon will be use the burning function of NERO
- e . If you are very familiar with Nero, so if you want to use NERO software, you can use the “ e Run Nero burning” function instead of the “Burning CD” function.

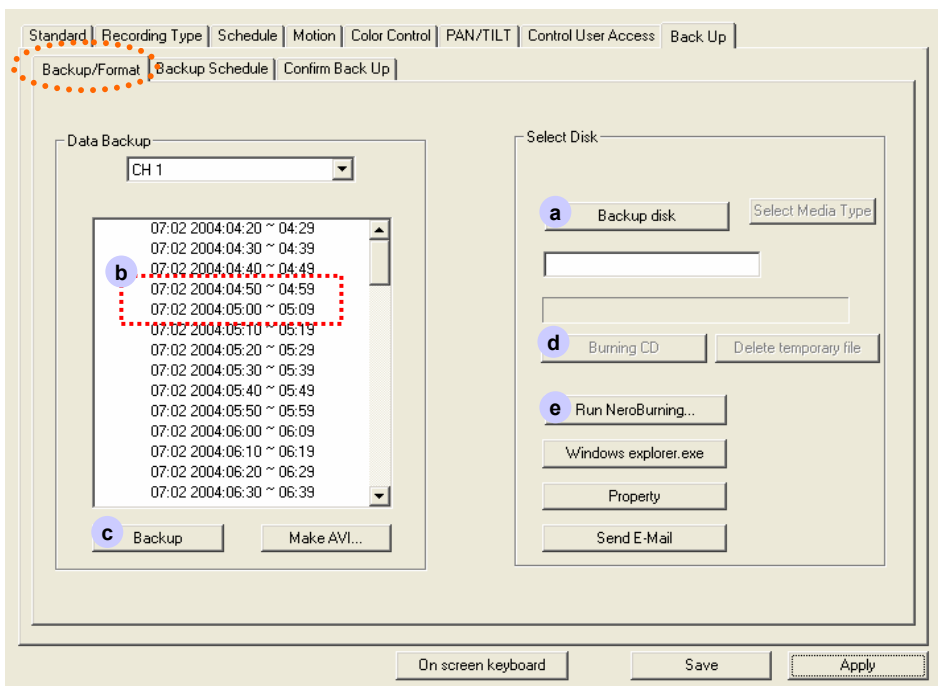

BACKUP SETUP/FORMAT

1. **NEW!!** CD Burning Method using “NERO” for Windows 2000

If you use Windows 2000, you have to use Nero or DirectCD when burning CD's.


But, you should install just one of them.

Please do not install both of them in the same system.

Caution : After installing Nero, if you want to use DirectCD, you have to format the system. After that, you have to install DirectCD. Otherwise It has some possibility of S/W crashing between Nero & DirectCD. otherwise, if you want to change DirectCD to Nero, you have to format the system too.

A. Procedure

- a . Select Back-up folder – Select CD R/W directory.
(Ex: If “F” directory has a CD R/W, you have to choose F but if “E” directory has a CD R/W, you have to choose E.)
- b . Select Backup time
- c . Click Back-up icon
Click “Burning CD” icon – If your system has NERO, when you click the “Burning CD” icon will be use the burning function of NERO
- e . If you are very familiar with Nero, so if you want to use NERO software, you can use the “e Run Nero burning” function instead of “Burning CD” function.

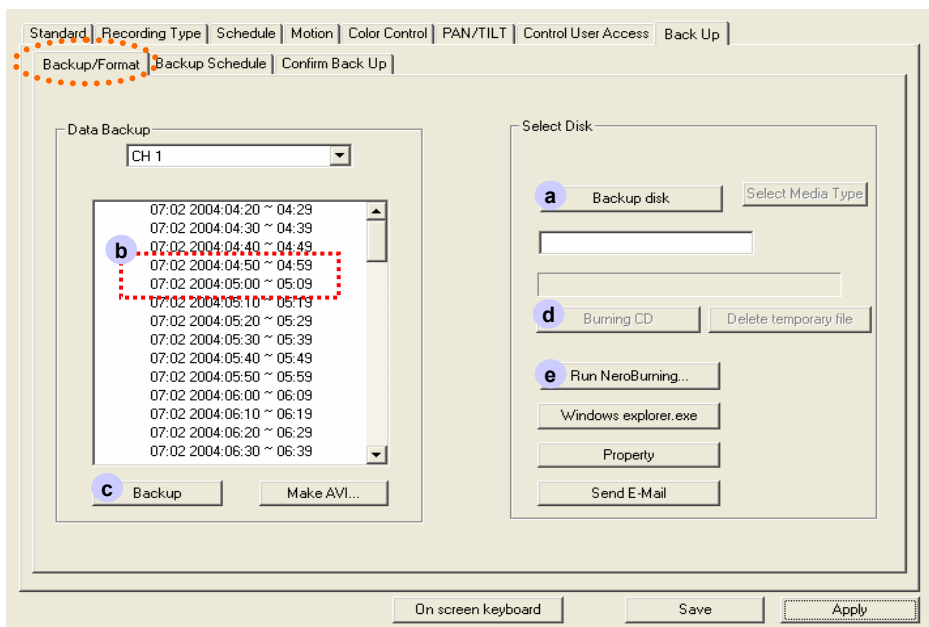

BACKUP SETUP/FORMAT

1. **NEW!!** CD Burning Method using “DirectCD” for Windows 2000

A. Procedure

- a. Select Back-up folder – Select CD R/W directory.


(Ex: If “F” directory has a CD R/W, you have to choose F but if “E” directory has a CD R/W, you have to choose E.)

- b. Select Backup time
- c. Click Property icon

After you insert the unformatted blank CD into the CD Rom, click DirectCD icon then the formatting will begin.


- d. Click “Back-up” icon

When burning, you just click the “Back-up” icon and it will burn automatically. you don’t need another step for the burning.

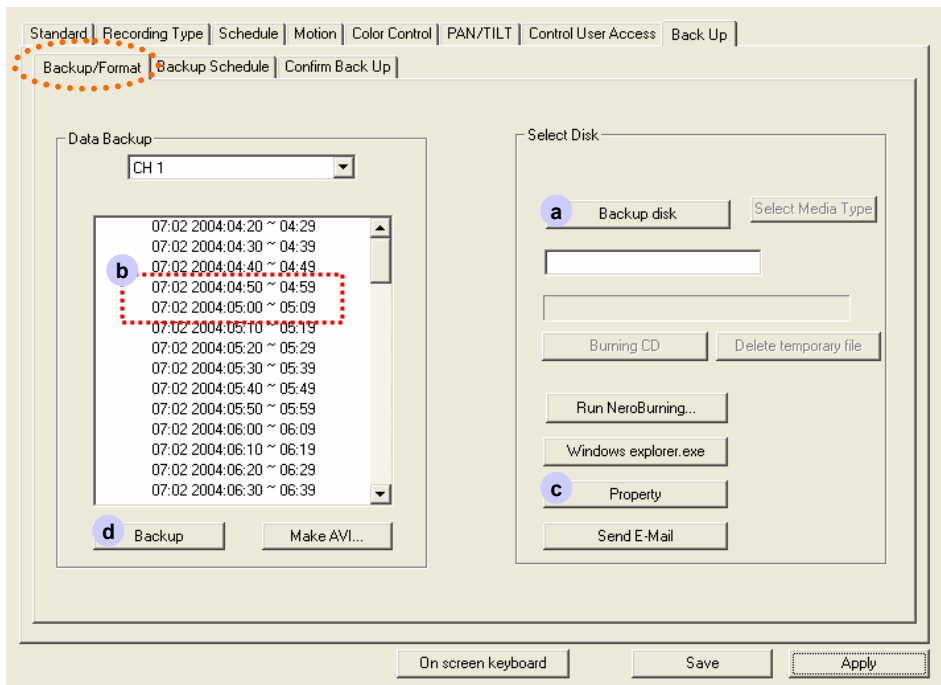

BACKUP SETUP/FORMAT

J. Send E-mail : Send a mail attached with avi file

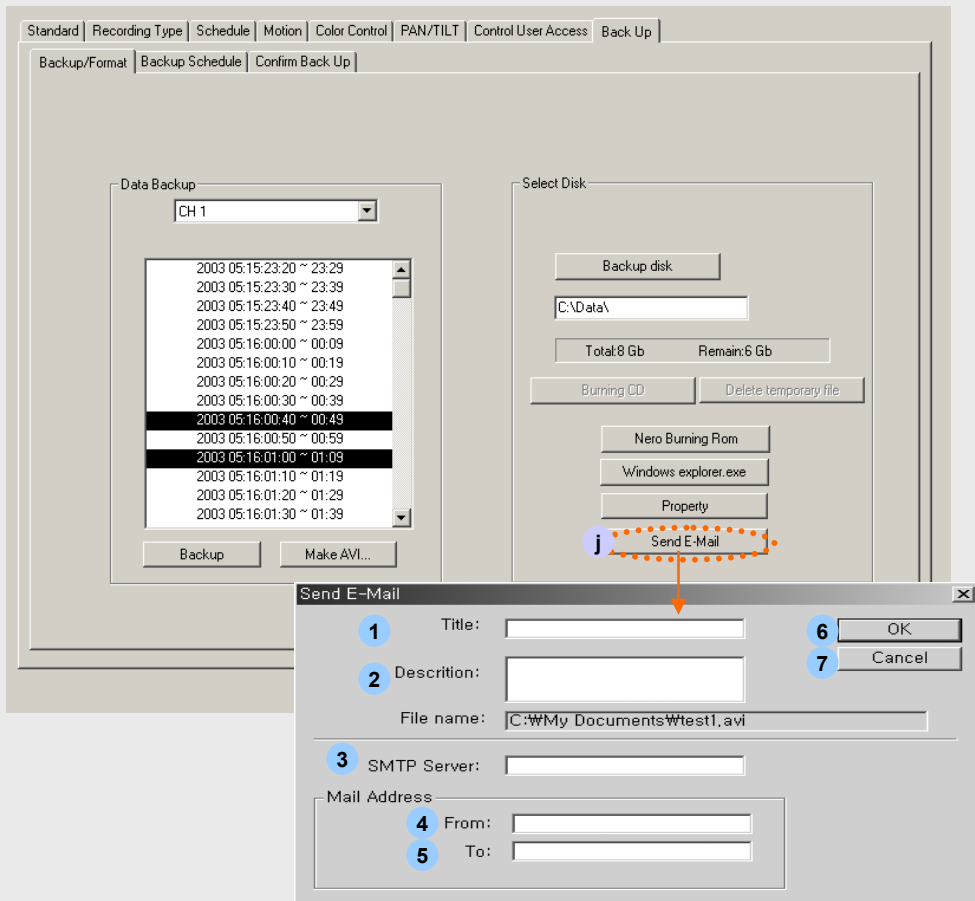

1. Type **Title** name.
2. Type **Description**.
3. Type **SMTP Server** name.
(If you don't know this name, contact your network service company or provider.)
4. Type e-mail address of sender.
5. Type e-mail address of receiver.
6. Click "**OK**" button to send a mail with a captured avi file.
7. Click "**Cancel**" button to stop this procedure.

BACKUP SETUP SCHEDULE

(8) BACK UP

8-2. Backup Schedule

Standard | Recording Type | Schedule | Motion | Color Control | PAN/TILT | Control User Access | Back Up

Backup/Format | Backup Schedule | Confirm Back Up

	Save time	Back Up time
<input checked="" type="checkbox"/> 1	2003-05-15 23:00~2003-05-17 10:08	2003-05-15 23:00~2003-05-17 10:08
<input checked="" type="checkbox"/> 2	2003-04-26 18:50~2003-05-17 10:08	2003-04-26 18:50~2003-05-17 10:08
<input type="checkbox"/> 3	2003-05-16 02:02~2003-05-17 10:08	2003-05-16 02:02~2003-05-17 10:08
<input type="checkbox"/> 4	2003-05-15 23:00~2003-05-17 10:08	2003-05-15 23:00~2003-05-17 10:08
<input type="checkbox"/> 5	2003-05-17 10:26~2003-05-17 11:00	2003-05-17 10:26~2003-05-17 11:00
<input type="checkbox"/> 6	2003-05-17 10:59~2003-05-17 11:00	2003-05-17 10:59~2003-05-17 11:00
<input type="checkbox"/> 7	2003-05-17 10:26~2003-05-17 11:00	2003-05-17 10:26~2003-05-17 11:00
<input type="checkbox"/> 8	2003-05-17 10:59~2003-05-17 11:00	2003-05-17 10:59~2003-05-17 11:00
<input type="checkbox"/> 9	2003-05-17 10:26~2003-05-17 11:00	2003-05-17 10:26~2003-05-17 11:00
<input type="checkbox"/> 10	2003-05-17 10:59~2003-05-17 11:00	2003-05-17 10:59~2003-05-17 11:00
<input type="checkbox"/> 11	2003-05-17 10:26~2003-05-17 11:00	2003-05-17 10:26~2003-05-17 11:00
<input type="checkbox"/> 12	2003-05-17 10:59~2003-05-17 11:00	2003-05-17 10:59~2003-05-17 11:00
<input type="checkbox"/> 13	2003-05-17 10:26~2003-05-17 11:00	2003-05-17 10:26~2003-05-17 11:00
<input type="checkbox"/> 14	2003-05-17 10:59~2003-05-17 11:00	2003-05-17 10:59~2003-05-17 11:00
<input type="checkbox"/> 15	2003-05-17 10:26~2003-05-17 11:00	2003-05-17 10:26~2003-05-17 11:00
<input type="checkbox"/> 16	2003-05-17 10:59~2003-05-17 11:00	2003-05-17 10:59~2003-05-17 11:00

CH 1 ☐ Apply all channel

Save time
Thursday, May 15, 2 11:00:00 PM

Saturday, May 17, 2 10:08:40 AM

Back Up time
Thursday, May 15, 2 11:00:00 PM

Saturday, May 17, 2 10:08:40 AM

OK Cancel

On screen keyboard Save Apply

When you want auto back up, select camera and time to back up.

a. Channel : Check this in your choice. Back up schedule will be activated.

b. Schedule : By click, able to select recorded image data base, and recording reservation time.

c. Apply all channel ☒ : Auto data backup which was selected all channels.


d. Save time : Set time period for backup execution time to make a backup.

e. Backup time : Setup time for backup.

CONFIRM BACKUP SETUP

(8) BACK UP

8-3. Confirm Backup

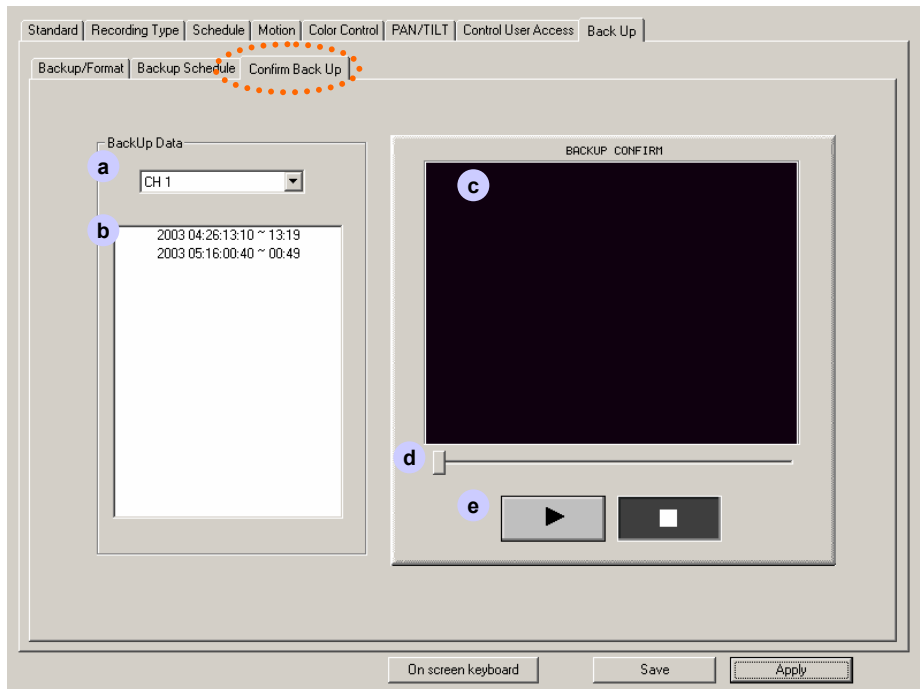

a. Select Camera



b. Backed up data list (time table.) :

Check Back Up data – Able to check whether back up data correctly or not.


The image in box when press Play button is from back up media, not from HDD.


c. Play to confirm back up image

d. Slide bar to play.

e.  Play  Stop

SEARCH SCREEN


- L**  Go to **"SEARCH"** mode.

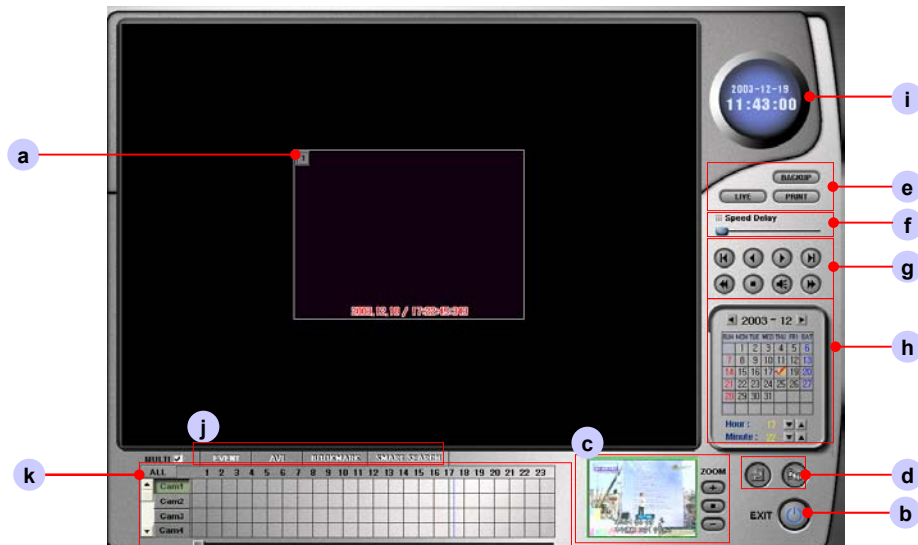

a. Search screen

b. DISPLAY : Go to Set Up Mode

c. ZOOM IN/OUT : Select one channel to Zoom In / Out .

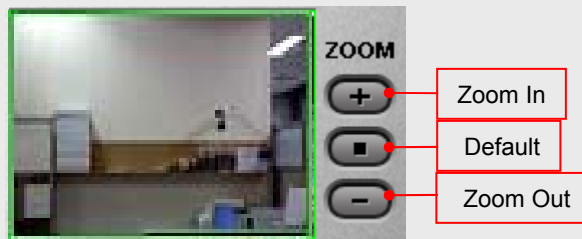

d. On screen board : Virtual keyboard is open.


It is useful to type letters by mouse without real keyboard.


Panorama Search : Can control one channel search in panorama mode.

SEARCH SCREEN

e. **BACKUP** : **BACKUP**

Back up the desired data to storage device.


: ☒ for one frame image back up with inserting **water mark** or not
( **Water mark** : A copyright-protection method of embedding a code into file.)

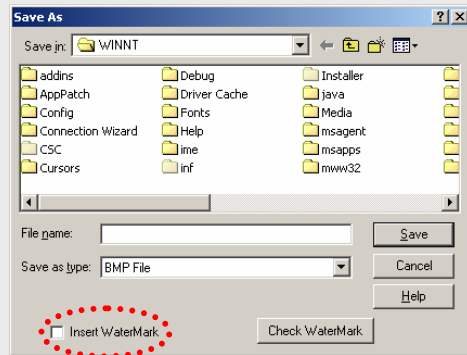

PRINT : **PRINT**

Printing image & Sending E-mail


1. Type the title of printing page.
2. Type the details of event
(used for message to e-mail).
3. Click "OK" then print an image.
4. If you want to send a mail with a captured picture, click e-mail button.

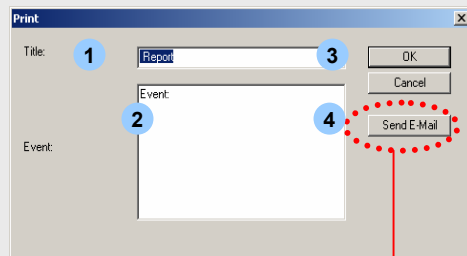

Type your SMTP Server

Type mail address of sender

Type mail address of receiver

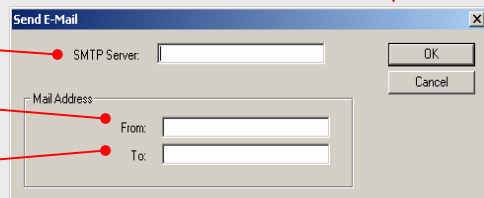

LIVE : **LIVE**

Display current live images.




SEARCH SCREEN

f. Speed-Delay Control : Can control play speed low or high.

Ex) Click "PLAY" button  and then move speed delay bar.


g. Search the recorded data with below buttons

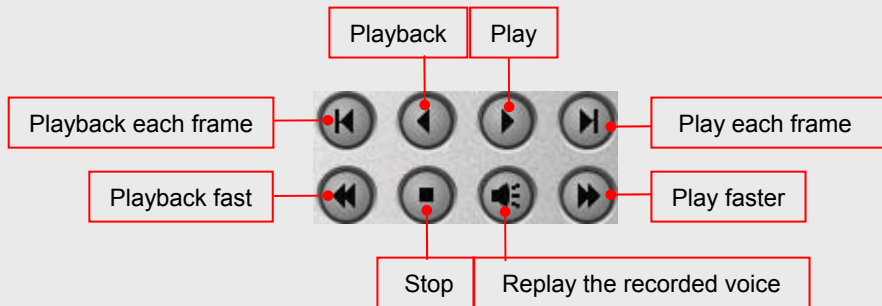

h. Calendar

Display the date with recorded data with ☒.


Click desired date, hour & minute for searching

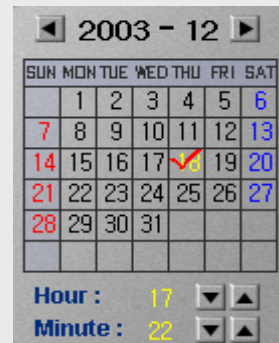

i. TIME : Display current time.



 
j. Other function

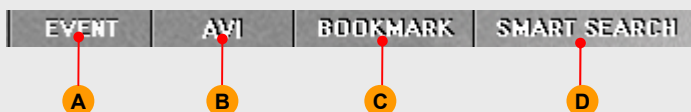

SEARCH SCREEN

- A EVENT:** Able to search data per each event.


Also, you can search by event color.

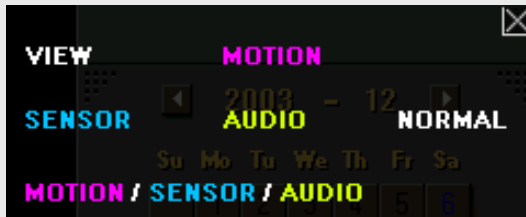

- B AVI**

: You can make an AVI file in '**SEARCH**' mode and '**SETUP/Backup**' mode.

In '**SEARCH**' mode, make an AVI file from current search time until clicking "**Stop saving AVI file**" button without time period setting.

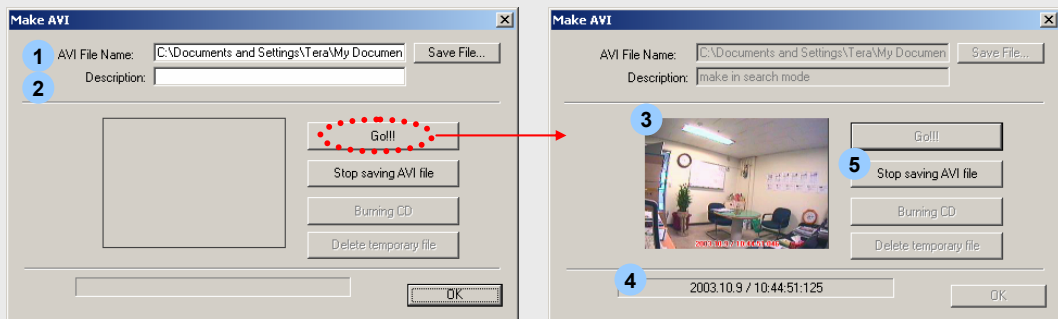


1. Select a channel and move to desired starting time in search screen.
2. Click "**AVI**" button **C** upper on the time table.
3. Click "**Save File**" button **1** . It will open dialogue box where find file folder and enter a file name to save.
4. Enter 'Description'. This description can be seen in attribute of file.
5. Click "**Go!!**" button. Then display image in **3** and being saved time in **4** .
6. Click "**Stop saving AVI file**" button **5** when you want to finish.

SEARCH SCREEN

- C Bookmark :** Remember and go to the remembered time and search channels.

 Add Favorites
Favorits list

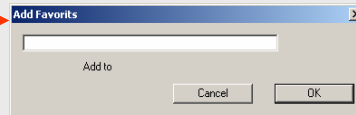


Add Favorites :
You can save the selected
Search time and channel.



Favorites list :
You can see the list of selected
Search time and channel.


- D Smart Search**

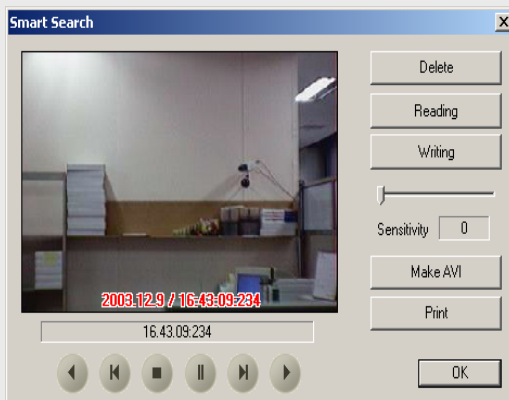

- Delete : Delete the motion area.
- Reading : Read the previous saved data by smart search.
- Writing : Able to save the searched data in the motion area by smart search.
- Sensitivity : Move the bar to adjust the sensitivity of Motion detection.
- Make AVI : Save the searched data file to AVI file format
- Print : Print the required data.

SEARCH SCREEN

k. Time Table

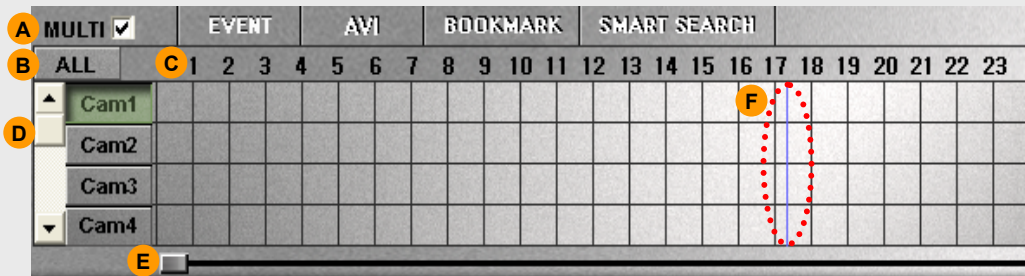

- A** Check multi option to select one more cameras continually
- B** Select all cameras for searching
- C** Double click time area to change 10 minute or 1 minute period table.
- D** Select desired camera No. for searching
- E** When you search in 10 minute or 1 minute period search, scroll this bar to move time zone.
- F** Move the Red line or click time zone for desired searching time



Chapter 5.

Server Voice

VOICE SET UP

- 1 Install DVR S/W.
- 2 Insert microphone at Microphone-in of the DVR system. (Back panel)
- 3 Go to SETUP mode -> Standard -> Voice

Check Voice box for voice recording ☒

The screenshot shows the 'Standard' tab of the DVR setup menu. The 'Voice' checkbox is checked and highlighted with orange dots. Other visible options include 'Camera name', 'See the Voice Wave', 'MIC' input, 'Camera Auto Switching', 'Event spot monitor', 'Switching every 5 Sec', 'Monitor out Select', 'Auto System reset', 'Test System Reset', 'Once every 0 day(s) at 4:24:24 PM', 'Reboot', 'Set Password for Setup', 'Current Password', 'New Password', 'Confirm Password', 'Set Password', 'Password Setup', 'Managing Disk', 'Scan Disk', 'Format', 'Refresh DataBase', 'Recording while delete data', 'Compression' (MJPEG, MPEG4, MPEG4+), 'Picture Quality', 'Resolution: 320x240', 'Set Channel' (4 CH, 8 CH, 16 CH), 'Windows Logon', 'Power Mode: Window', 'On screen keyboard', 'Save', and 'Apply' buttons.

- 4 Choose audio input by line or micro phone.
- 5 Click "Apply" for voice recording.




Only "Channel No. 1" supports Voice recording.


When DVR program shut off, No Voice recording.

CONFIRM VOICE RECORDING

- 1 Click **Start -> Program -> Accessories -> Entertainment -> Volume Control**

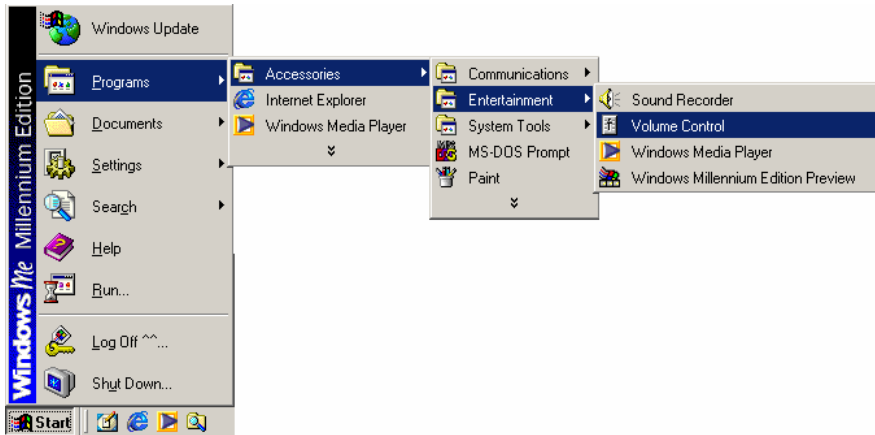


- 2 **Volume Control : Click Options -> Properties**

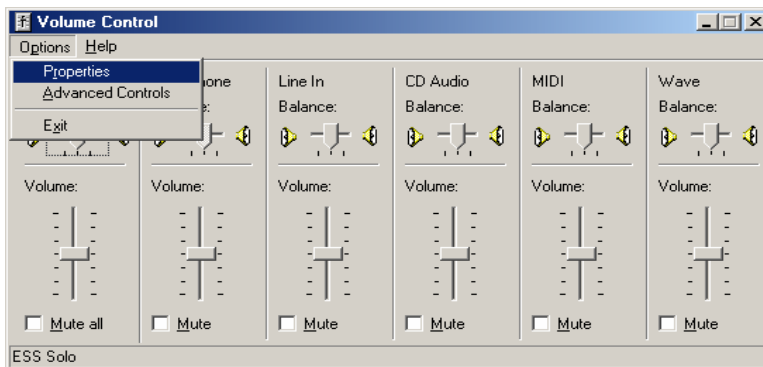


- 3 When "Properties" box shows up,

- a Select "Recording"
- b Select "Microphone"
- c Click "OK"

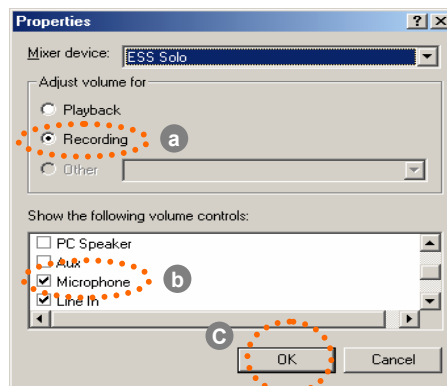

CONFIRM VOICE RECORDING


- 4 Click **Start -> Program -> Accessories -> Entertainment -> Sound Recorder**

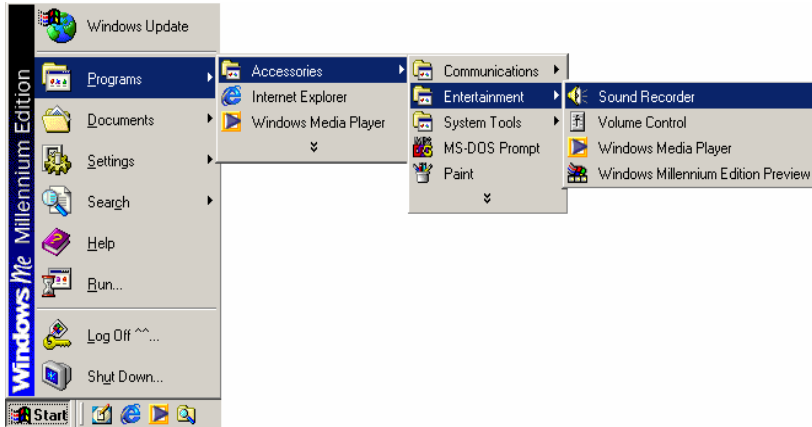

- 5 When "Sound-Sound Recorder" box shows up, click record button to record voice



- 6 While Voice is recording normally, you can see the wave of voice.

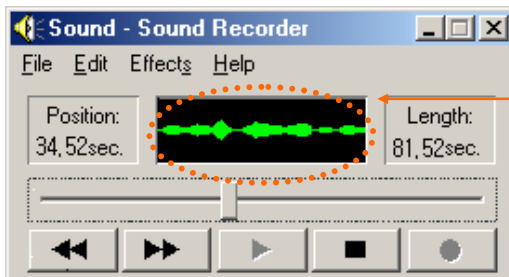


※ When mother board is Onboard,
"Sound => Enable" at CMOS setup.




Chapter 6.


Client Connection

1. CONNECTION

After Installation of program as same way as server, Double-click  Icon then you may see following message box.

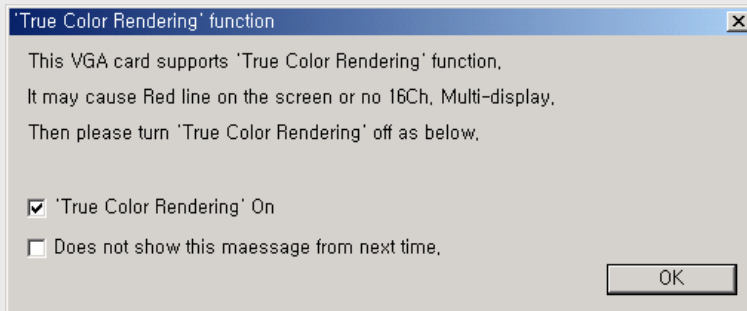

Click “OK” button, then following Client program will be loaded.

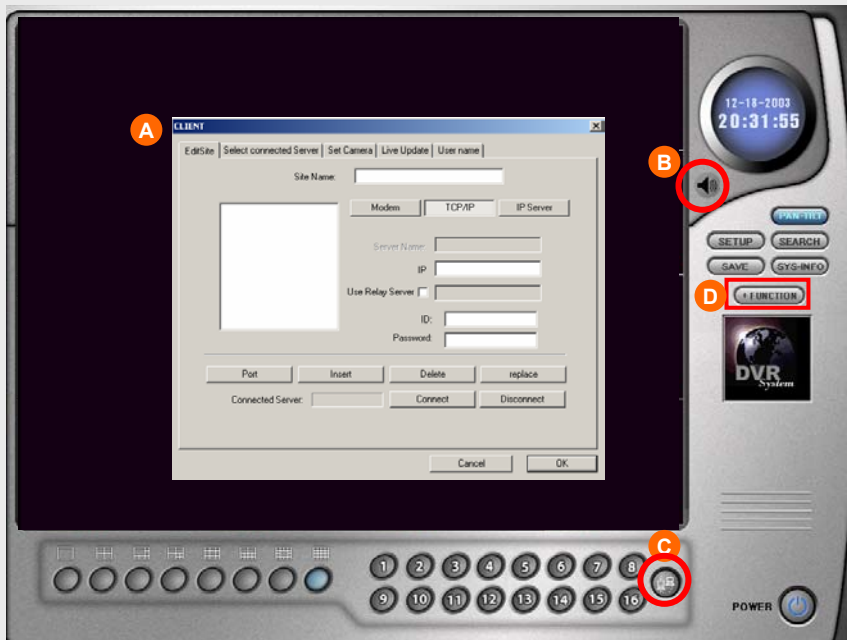

A Client connection setup box : Edit connection information and set up.

B Audio : Click to activate audio from Server.

B Site-edit : Dialogue box for client connection will be open.

CLIENT / CONNECTION

(A) Edit Site : Add or delete server site to connect.

1. Site Name

: Enter name for a connected site

2. Choose network connection type.

 
Modem -> Type Phone No.

TCP/IP -> Type IP Address.

IP Server -> Type server's name
which had been set up at server site.
Use relay server -> If you want to use
relay server, please check it.

3. Enter ID & Password for the site.


4. "Port" to change TCP/IP port number.

( **Server and Client site must be matched this port number.**)

"Insert" to add up the site list .

"Delete" for delete the site from
the site list

"Replace" to edit the site information.

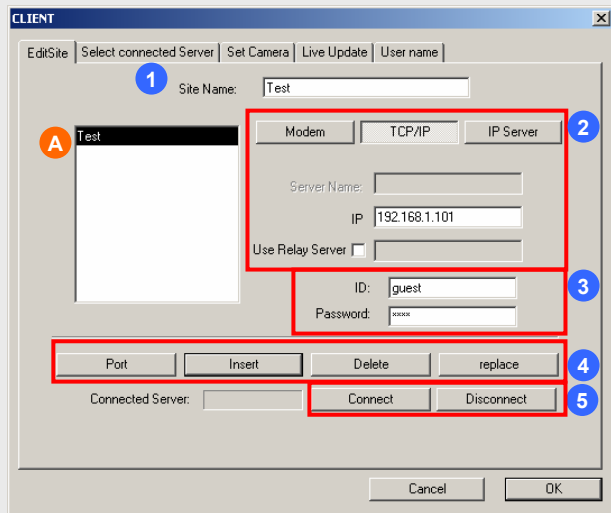

5. Connect : Select server to connect among the remote site list . And click "Connect" button.




When you want to connect to Server side using Private IP, you can connect to it by using Public IP(Relay Server). From next version S/W, you can use this function.

(B) Select Connected Server

: Present connected server list.

You can select a site from the list
to connect or disconnect.


If you choose one site and then
go back "Edit site" tab to select
connect or disconnect.

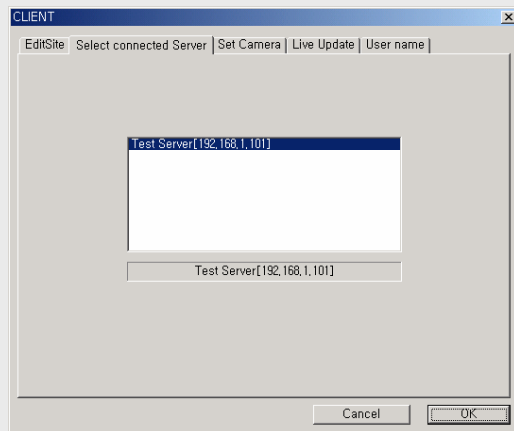

CLIENT / CONNECTION


(C) Set Camera

: If you connect one more remote server.
You can select cameras which you want
to view among multi servers.
Also you can set no. of channel to
display in screen.

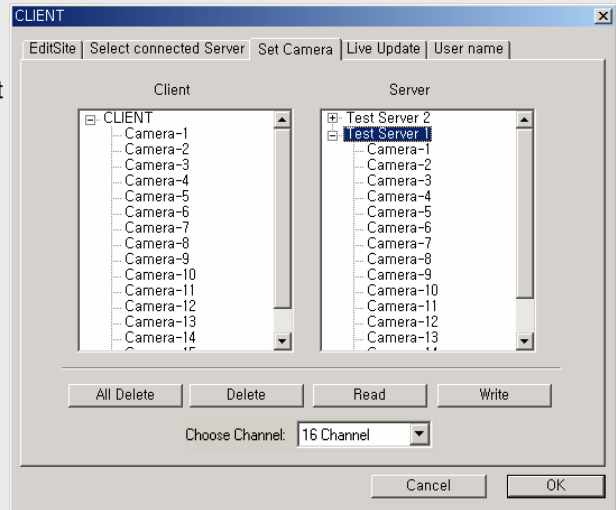

You can define multi channel setting.


Drag desired camera of Site B
and drop down desired camera
of site A .

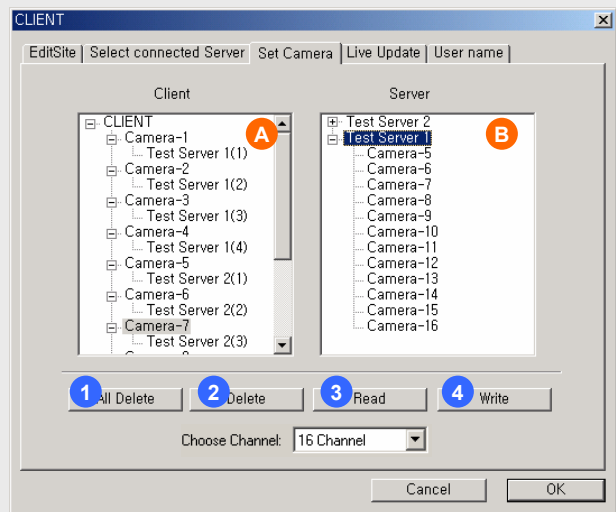

- 1 Delete all channel setting.
- 2 Delete selected channel setting in A .
- 3 Click and call a saved circumstance.
- 4 Click and save a present circumstance.

(D) User's Name

: Type user's name as you wish.
This name is used to send a message
to server or get a message from server.

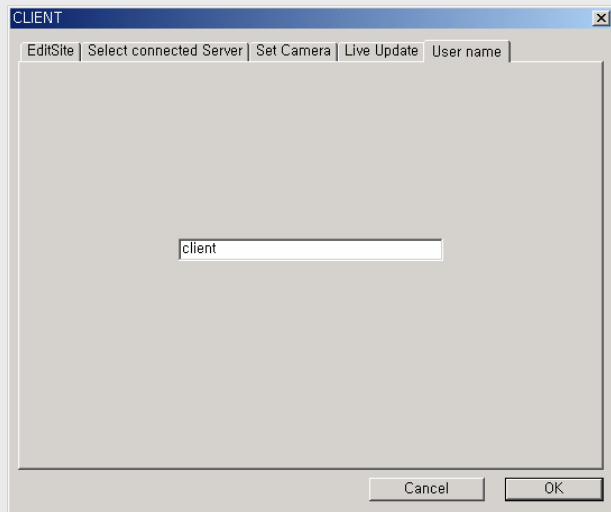

The screenshot shows a window titled "CLIENT" with a standard Windows-style title bar (minimize, maximize, close buttons). Below the title bar is a menu bar with five items: "EditSite", "Select connected Server", "Set Camera", "Live Update", and "User name". The "User name" menu item is currently selected. The main area of the window is a large, light gray rectangle. In the center of this area is a text input field containing the word "client". At the bottom right of the window, there are two buttons: "Cancel" and "OK".




Chapter 4.


Search Screen

CLIENT / FUNCTION

D

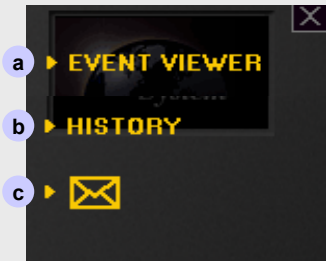

- a **EVENT VIEWER** : When event happens, the pop up window which has event will be shown. So, intensive and efficient monitoring will be possible.

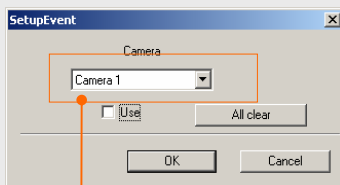

Select camera for event set up.




- b **HISTORY** : It will show the list of system access and control history.
- c **MESSAGE** : Able to communicate with Server site.

Connected Client List

: Go to 'Control User Access' in Client site.

After clicking "Connected Client List", you can see the other connected Client. By using "Disconnect Client" button, you can control other users who is connected the same Server.

Connected Client List

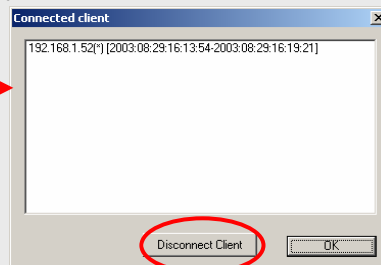




Chapter 7.

Web Client

WEB CLIENT CONNECTION

1. Execute Internet web browser and type DVR Server's IP address.

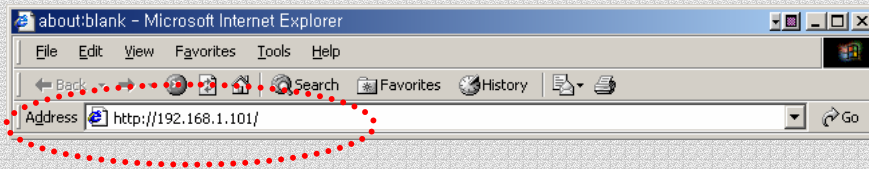


2. Connecting to server will take 2~3 minutes depend on network circumstance.




3. Click "Yes" button.

To download Nano Active X component.

This window will show when you connect to DVR server for the first time.

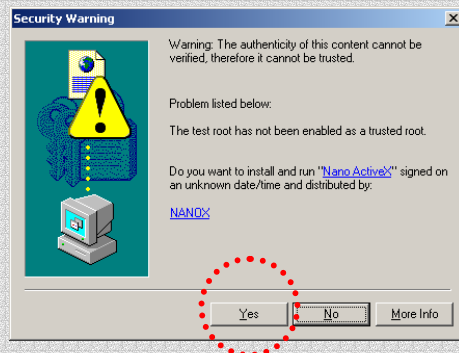


4. Input your ID and password registered in remote site.

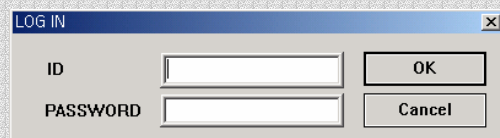


WEB CLIENT MAIN

5. Choose OVERLAY support. Confirm your VGA card support this feature, and then select.

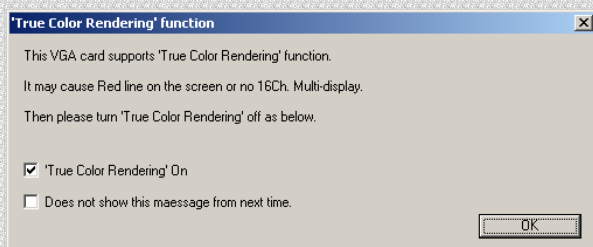

6. When you success to connect DVR server, the following window will show.

※ In order to view images through web browser, Direct X 8.1 or above should be installed on client PC.

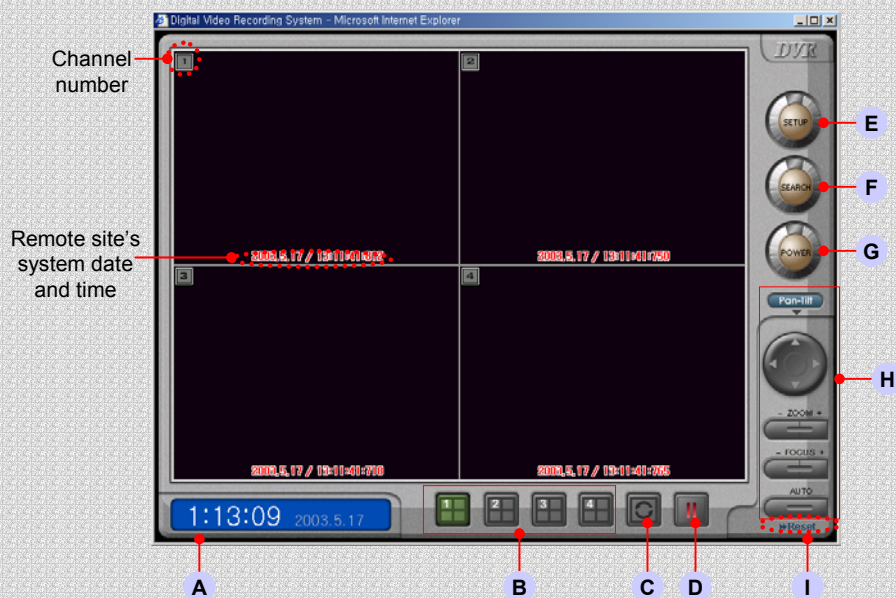

Web viewer shows server site's date and time with real live images. If you want to view specific one channel, double click on your desired channel image.


WEB CLIENT MAIN


A. Present client system's date and time.

1:13:09 2003.5.17

B. Select division screen button. Only it will display 4 channel mode without transmitted channel number. (ex. 1 : Ch.1~4, 2 : Ch.5~8, 3 : Ch.9~12, 4 : Ch.13~16)



C.  In 1 channel screen mode, Click this button, then Sequentially switch next channel.

D.  Click to pause that images are received from server. Once more click to recover.

E. Go to 'Setup' mode



F. Go to 'Search' mode



G. Terminate web viewer.



H. PTZ control




Click, to activate PTZ control after you choose a channel to control PTZ.

Pan

Zoom in or out


Manually focusing

Automatic Pan

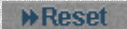I.  Download Nano Active X program if you want to reinstall or update.

WEB CLIENT SEARCH

F. Search mode

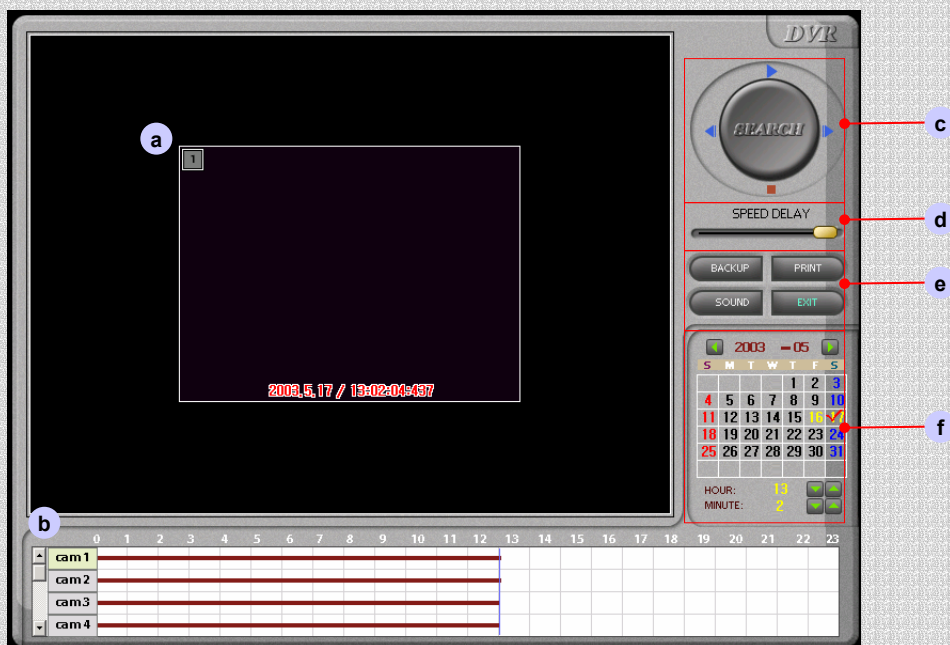

a. Display one channel image saved in server site. To enlarge or reduce an image, Double click image.

b. Time table : Choose searching time and channel from table. Click red line or move blue bar.

c. Search buttons

▶ : Play ◀ : Rewind each frame ▶ : Play each frame ■ : Stop

d. Speed delay : Control playback speed

e. **BACKUP** : Save displayed image with watermark or not. **PRINT** : Print out displayed image.

SOUND : Play with recorded sound (Present, not available) **EXIT** : Terminate search mode and go back main mode

f. Calendar : Find and choose recorded data from this. Click desired date(Yellow date is recorded).